



Illustrated Parts List

Model Series

09T500

TYPE NUMBERS
0002 through 3982.

TABLE OF CONTENTS

Air Cleaner	5
Blower Housing/Shrouds	6
Brake	5
Camshaft	3
Carburetor	4
Controls	5
Crankcase Cover/Sump	3
Crankshaft	3
Cylinder	2
Cylinder Head	2
Exhaust System	4
Flywheel	6
Fuel Supply	4
Gasket Set - Engine	3
Gasket Set - Valve	3
Governor Spring	5
Ignition	5
Lubrication	2
Operator's Manual	2
Piston/Rings/Connecting Rod	3
Rewind Starter	6
Warning Label	2



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

1319 WARNING LABEL



REQUIRED when replacing parts with warning labels affixed.

1319A WARNING LABEL



REQUIRED when replacing parts with warning labels affixed.








1058 OPERATOR'S MANUAL











1330 REPAIR MANUAL




1036 EMISSIONS LABEL

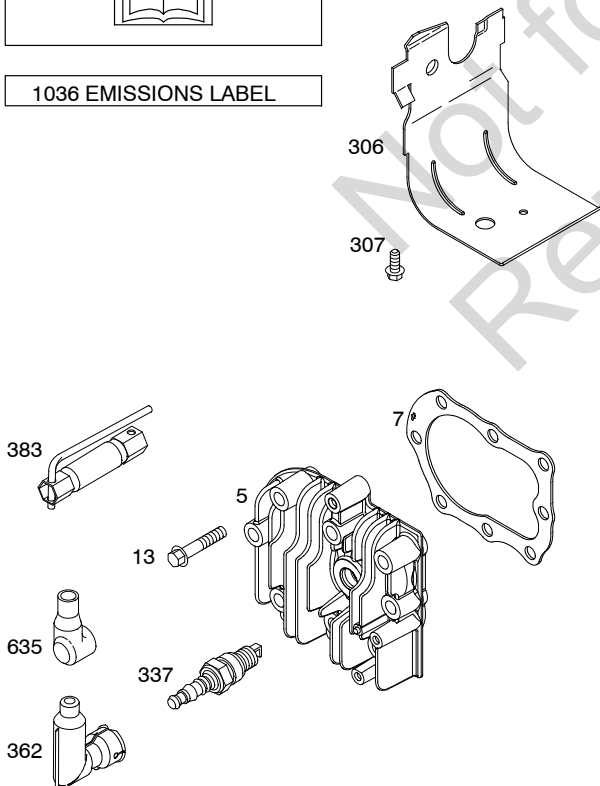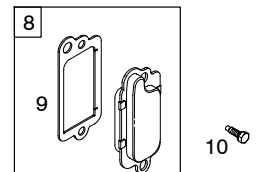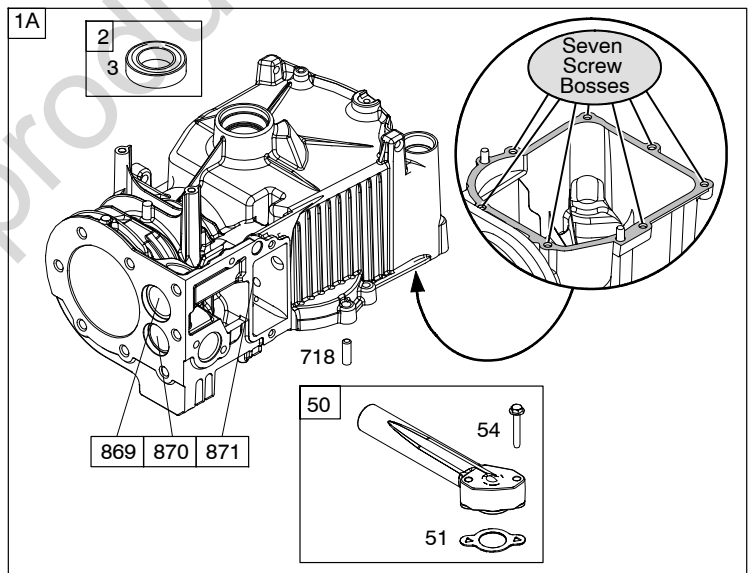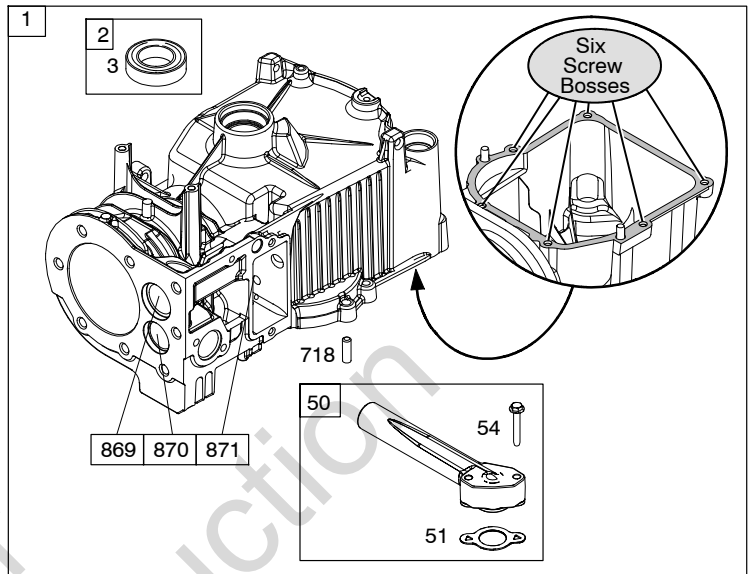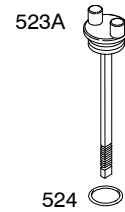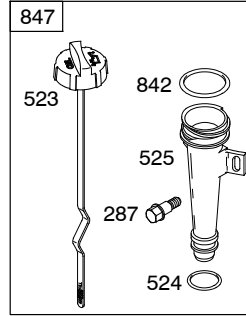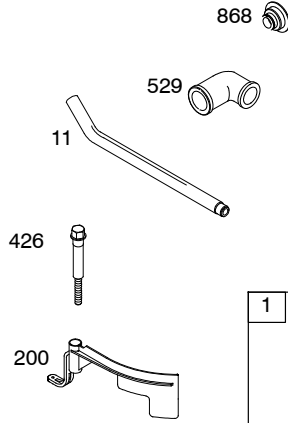


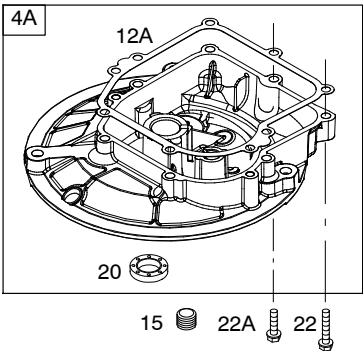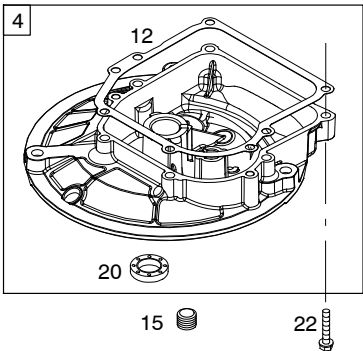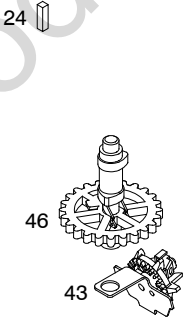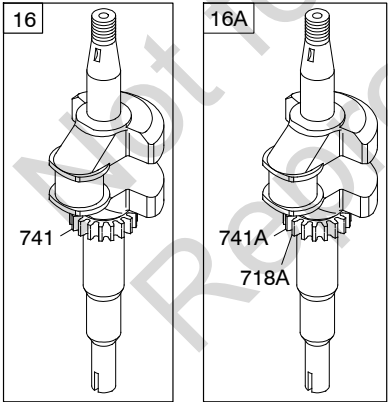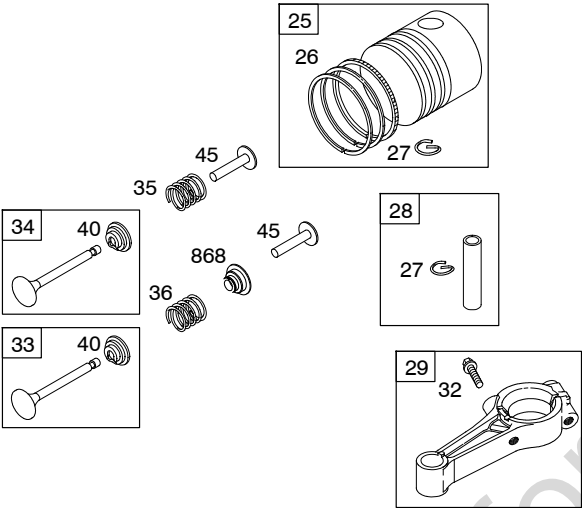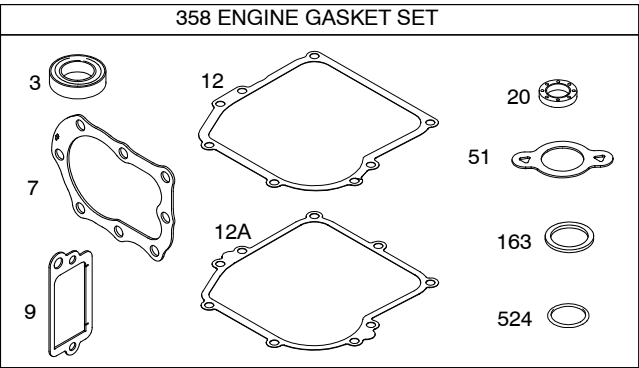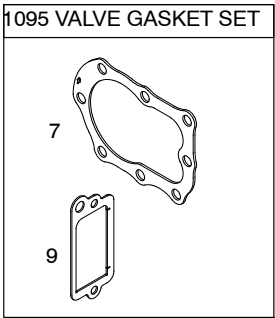

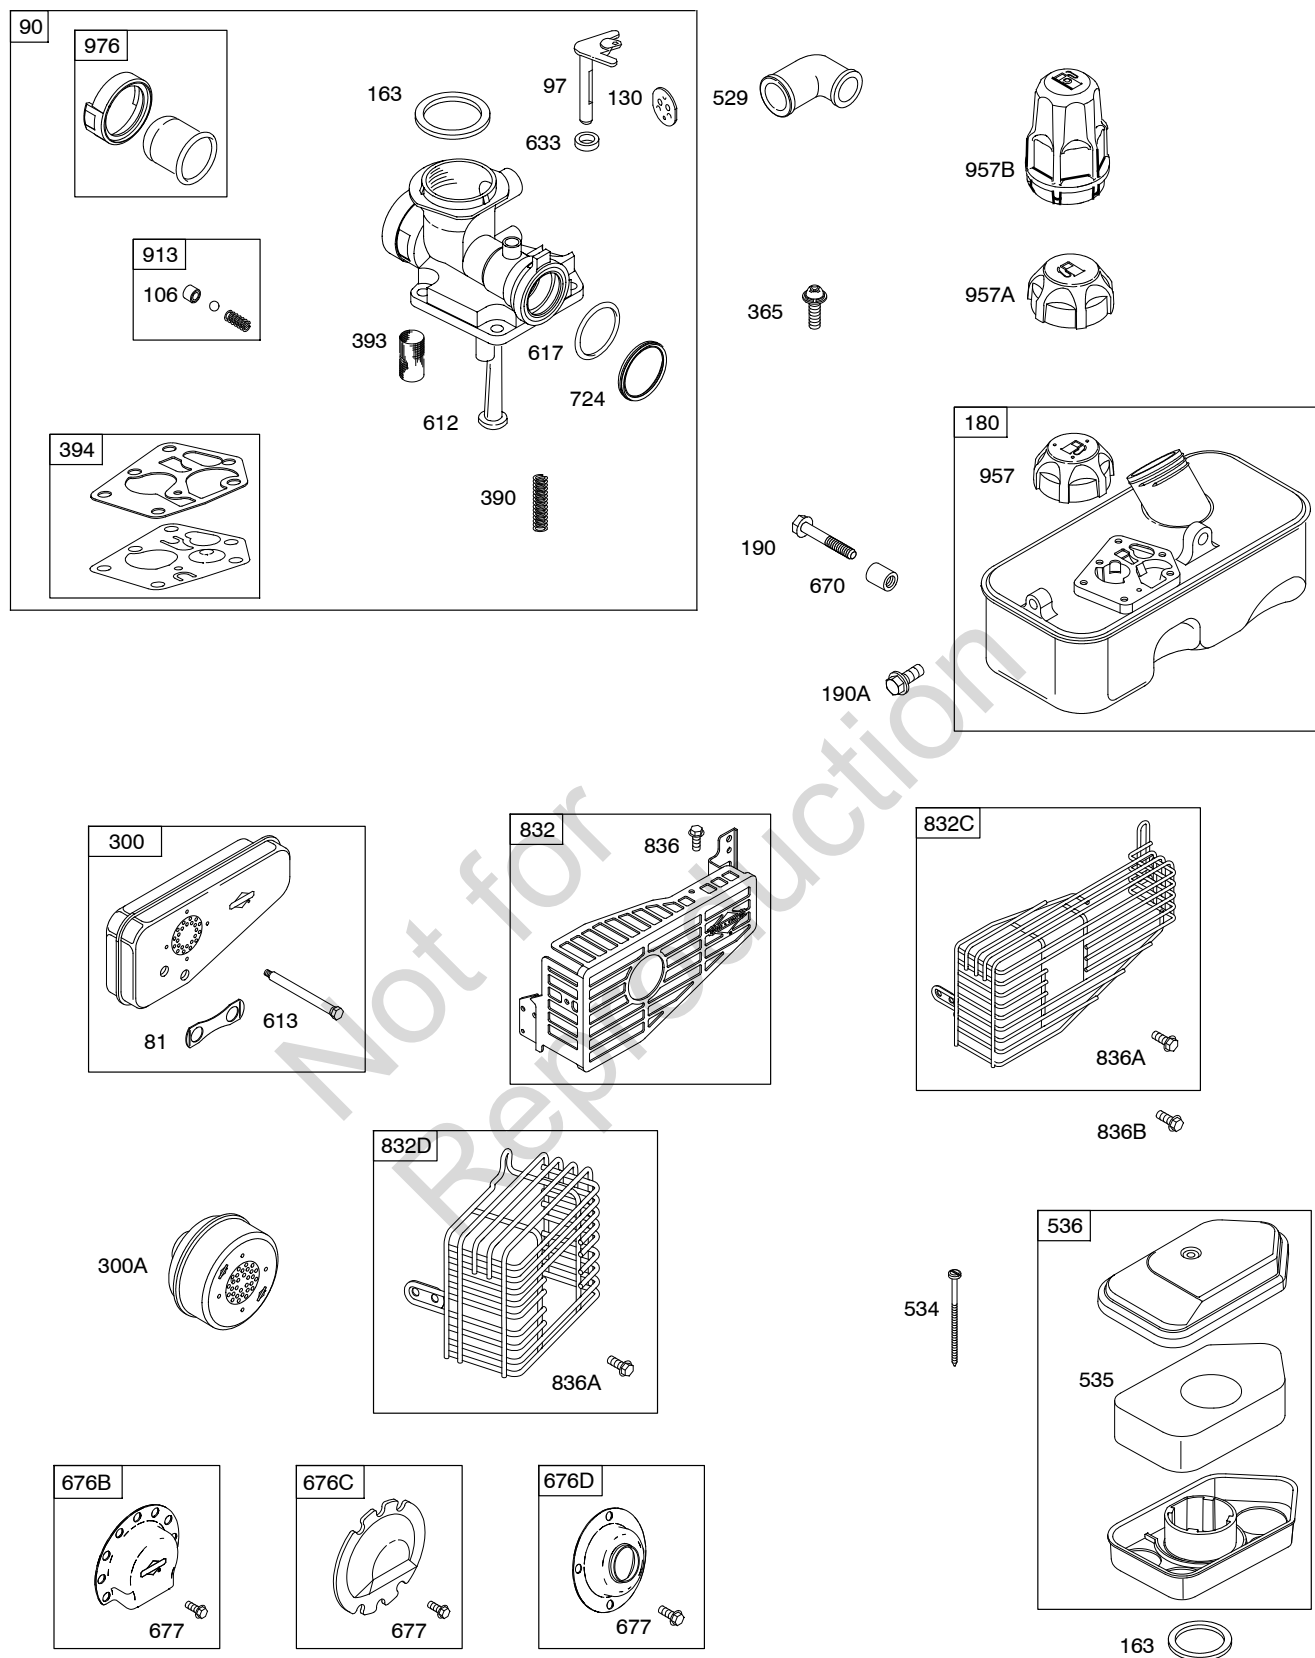

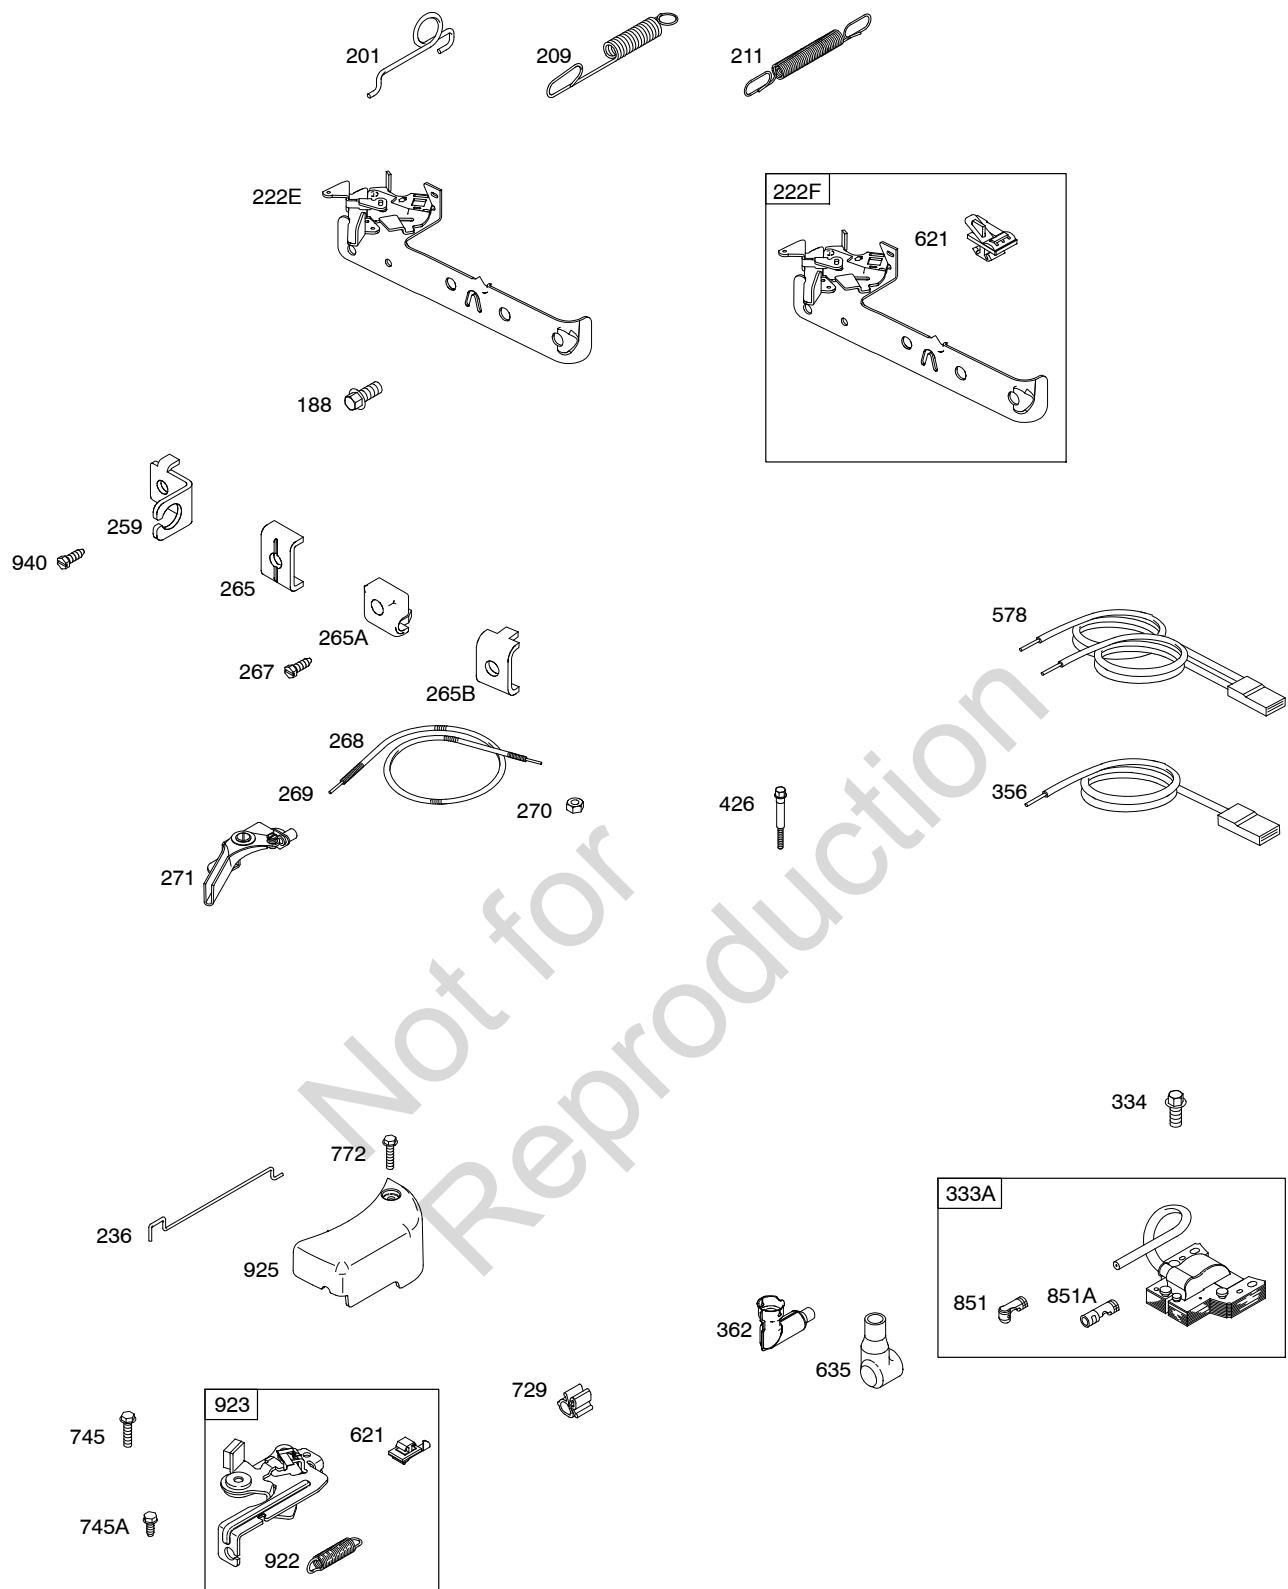

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3916-5 Assemblies include all parts shown in frames. 11/29/2012

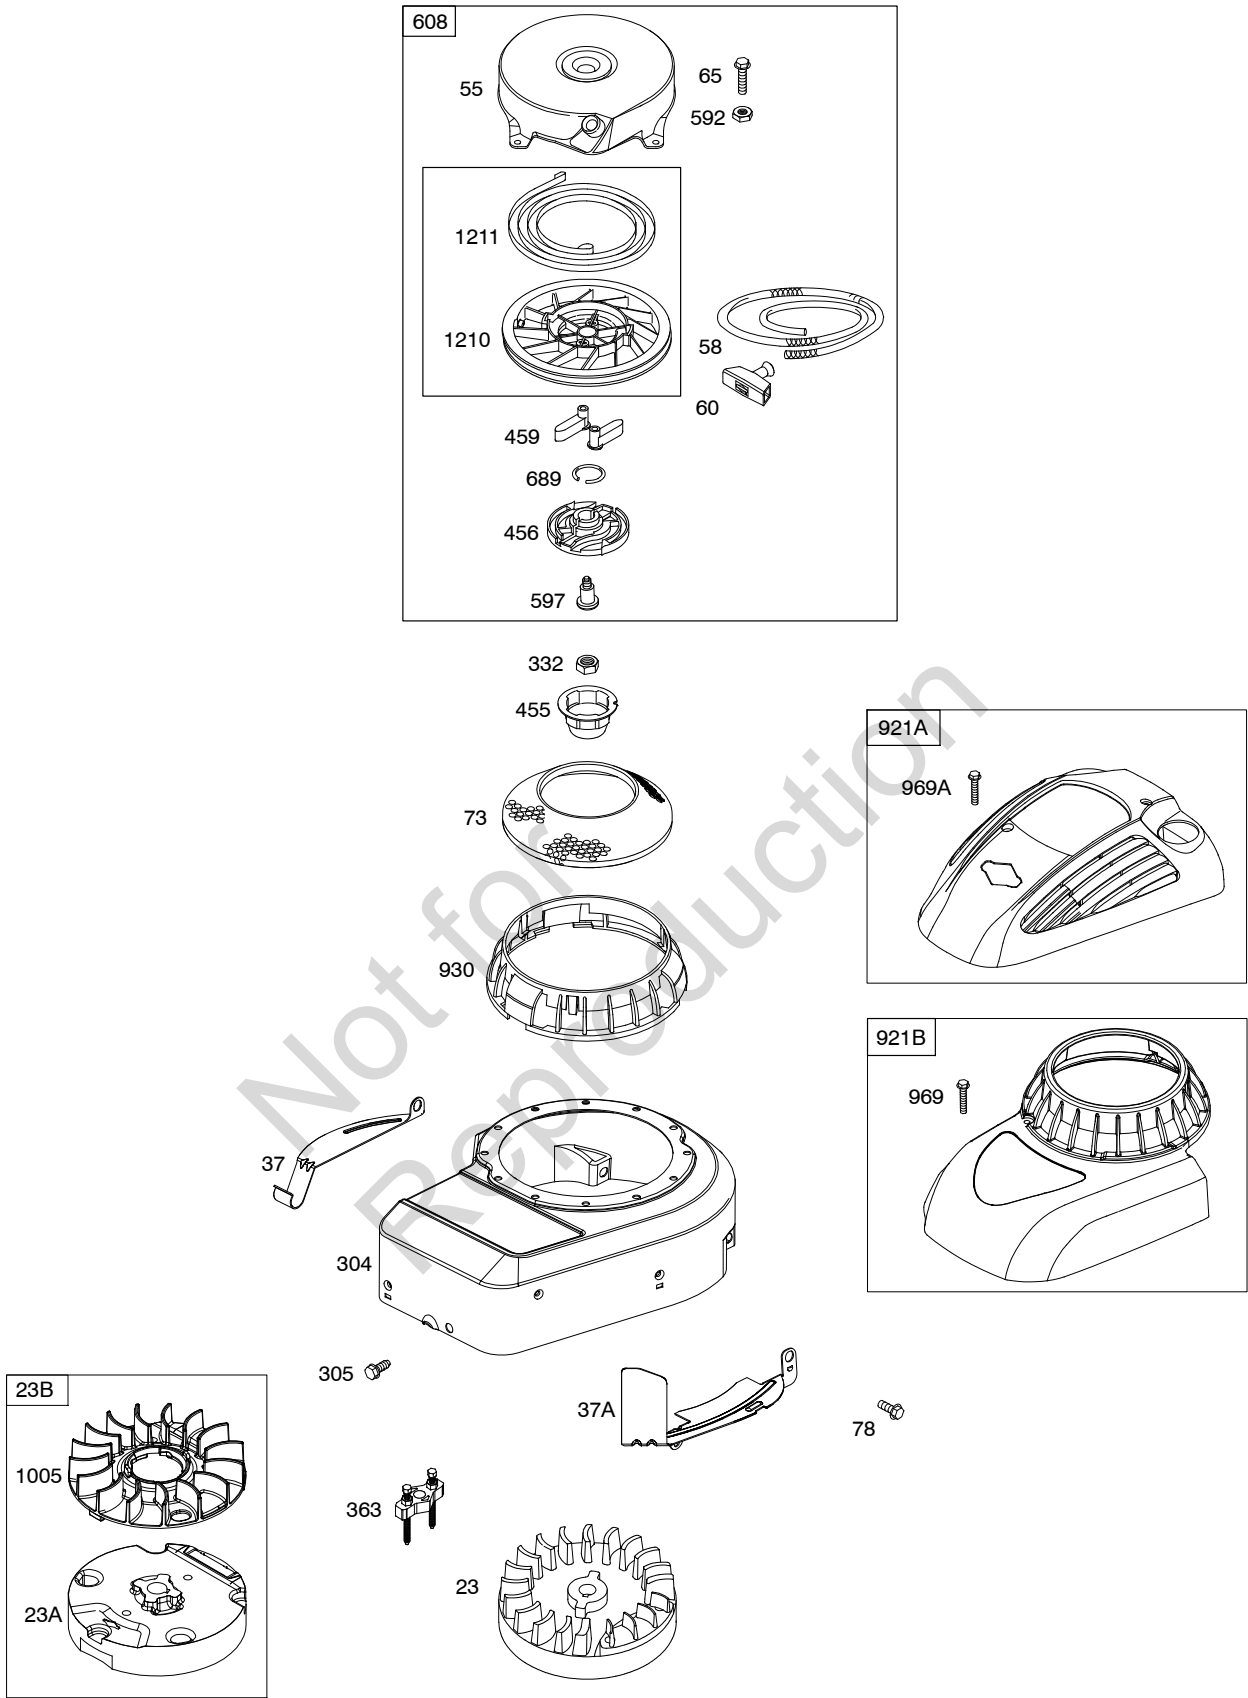

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3916-6 Assemblies include all parts shown in frames. 11/29/2012

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699653	Cylinder Assembly (Engines with 6 Sump Screws)	16	796211	Crankshaft ----- Note ----- 796212 Crankshaft Used on Type No(s). 0002, 0112, 0115, 0116, 0117, 0118, 0120, 0128, 0130, 0131, 0137, 0142, 0144, 0149, 0152, 0154, 0155, 0157, 0165, 0166, 0171, 0174, 0177, 0178, 0179, 0180, 0509, 0743, 0792, 0912, 0972, 2018, 2027, 2032, 2035, 2037, 2040, 2045, 2089, 2093, 2095, 2137, 2223, 2226, 2227, 2230, 2237, 2238, 2239, 2240, 2242, 3037, 3040, 3089, 3093, 3095, 3116, 3120, 3128, 3130, 3142, 3152, 3154, 3155, 3157, 3165, 3237, 3239, 3240, 3242. 796213 Crankshaft (Used After Code Date 08071300). Used on Type No(s). 0121, 2041, 2228. 796213 Crankshaft Used on Type No(s). 0003, 0126, 0136, 0153, 0156, 0163, 3041, 3121, 3136, 3153, 3156, 3163. 796215 Crankshaft (Used After Code Date 08071300). Used on Type No(s). 2222. 796215 Crankshaft Used on Type No(s). 0151, 3151.	16A	692991	Crankshaft (Used Before Code Date 08071400). Used on Type No(s). 0121, 2041, 2228. ----- Note ----- 791342 Crankshaft (Used Before Code Date 08071400). Used on Type No(s). 2222. 20 391483S Seal-Oil (PTO Side) 22 692551 Screw (Crankcase Cover/Sump) 22A 590763 Screw (Crankcase Cover/Sump) 23 799682 Flywheel ----- Note ----- Flywheel (For Replacement Flywheel, Order Reference 23B) Used on Type No(s). 0002, 0113, 0116, 0136, 0137, 0138, 0147, 0158, 0168, 2051, 2053, 2090, 2094, 2207, 2224, 2233, 2234, 3116, 3136, 3138, 3233. 23A 592003 Flywheel 23B 592370 Flywheel 24 222698S Key-Flywheel 25 795691 Piston Assembly (Standard) ----- Note ----- 795689 Piston Assembly (.020" Oversize) 26 795690 Ring Set (Standard) ----- Note ----- 795688 Ring Set (.020" Oversize)
1A	590772	Cylinder Assembly (Engines with 7 Sump Screws)						
2	796961	Kit-Bushing/Seal (Magneto Side)						
3	299819S	Seal-Oil (Magneto Side)						
4	798264	Sump-Engine (Engines with 6 Sump Screws)						
4A	590569	Sump-Engine (Engines with 7 Sump Screws)						
5	790169	Head-Cylinder						
7	698717	Gasket-Cylinder Head						
8	791781	Breather Assembly						
9	695890	Gasket-Breather						
10	691666	Screw (Breather Assembly)						
11	691245	Tube-Breather						
12	692218	Gasket-Crankcase (.015" Thick) (Standard) (Engines with 6 Sump Screws) ----- Note ----- 270895 Gasket- Crankcase (.005" Thick) (Engines with 6 Sump Screws) 270896 Gasket- Crankcase (.009" Thick) (Engines with 6 Sump Screws)						
12A	799587	Gasket-Crankcase (Engines with 7 Sump Screws)						
13	691640	Screw (Cylinder Head)						
15	691680	Plug-Oil Drain						

09T500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
27	691588	Lock-Piston Pin	97	691931	Shaft-Throttle	222F	691445	Bracket-Control
28	699659	Pin-Piston	106	691901	Seat-Inlet			Used on Type No(s).
29	699655	Rod-Connecting (Standard)	130	691190	Valve-Throttle			0002, 0003, 0113,
32	691664	Screw (Connecting Rod)	163	271139S	Gasket-Air Cleaner			0115, 0116, 0133,
33	296676	Valve-Exhaust	180	494406	Tank-Fuel			0136, 0137, 0138,
34	296677	Valve-Intake	188	692198	Screw (Control Bracket)			0141, 0144, 0147,
35	690520	Spring-Valve (Intake)	190	691640	Screw (Fuel Tank) (1 3/4" Long)			0149, 0152, 0155,
36	690520	Spring-Valve (Exhaust)	190A	691108	Screw (Fuel Tank) (9/16" Long)			0157, 0158, 0165,
37	690482	Guard-Flywheel (Carburetor Side)	200	691912	Blade-Governor			0168, 0171, 0174,
37A	691209	Guard-Flywheel (Muffler Side)	201	690347	Link-Air Vane			0179, 0180, 1513,
40	692194	Retainer-Valve	209	690251	Spring-Governor			2019, 2034, 2040,
43	698690	Slinger-Governor/Oil			----- Note -----			2051, 2052, 2053,
45	691762	Tappet-Valve			691297 Spring-Governor			2061, 2090, 2091,
46	691998	Camshaft			Used on Type No(s).			2094, 2095, 2137,
50	699644	Manifold-Intake			0002, 0116, 0126,			2207, 2224, 2226,
51	699649	Gasket-Intake			0151, 0155, 0157,			2233, 2234, 2235,
54	691111	Screw (Intake Manifold)			0168, 0171, 0509,	236	591292	Link-Lockout
55	692144	Housing-Rewind Starter			0743, 0792, 0972,	259	797041	Bracket-Casing Clamp
58	697316	Rope-Starter (88 5/8" Long)			2009, 2027, 2035,	265	692179	Clamp-Casing
		----- Note -----			2090, 2094, 2222,			Used on Type No(s).
		691921 Rope-Starter (70" Long)			2226, 2239, 3116,			0002, 0003, 0112,
		Used on Type No(s).			3151, 3155, 3157,			0116, 0127, 0133,
		0002, 0113, 0115,			3239.			0136, 0137, 0138,
		0116, 0133, 0136,			690250 Spring-Governor			0145, 0151, 0156,
		0137, 0138, 0141,			Used on Type No(s).			0163, 0165, 2000,
		0144, 0147, 0149,			0115, 0133, 0142,			2006, 2009, 2019,
		0152, 0155, 0157,			0144, 0180, 2034,			2027, 2035, 2036,
		0158, 0168, 0179,			2040, 2095, 3040,			2052, 2092, 2093,
		1513, 2034, 2040,			3095, 3142.			2137, 2222, 2238,
		2051, 2053, 2061,			690252 Spring-Governor			2239, 2240, 2242,
		2090, 2091, 2094,			Used on Type No(s).			3006, 3052, 3092,
		2137, 2224, 2226,			2053.			3093, 3116, 3127,
		2233, 2234, 2235,			690254 Spring-Governor			3136, 3138, 3145,
		3040, 3091, 3116,			Used on Type No(s).			3151, 3156, 3163,
		3136, 3138, 3141,			0003, 0113, 0117,			3165, 3239, 3240,
		3152, 3155, 3157,			0118, 0137, 0138,			3242.
		3233.			0158, 0174, 0178,	265A	690798	Clamp-Casing
60	691915	Grip-Starter Rope			2037, 2041, 2051,			Used on Type No(s).
65	690837	Screw (Rewind Starter)			2207, 2224, 2233,			0115, 0128, 0142,
73	699850	Screen-Rotating			2234, 3037, 3041,			0144, 0147, 0155,
78	692198	Screw (Flywheel Guard)			3138, 3233.			0157, 0166, 0168,
81	691179	Lock-Muffler Screw	211	691859	Spring-Governed Idle			0170, 0171, 0174,
90	795477	Carburetor	222E	691446	Bracket-Control			0177, 0179, 0180,
								2040, 2042, 2089,
								2095, 2207, 2226,
								3040, 3089, 3095,
								3128, 3142, 3155,
								3157.
						265B	691024	Clamp-Casing

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
267	691044	Screw (Casing Clamp)	337	796112S	Plug-Spark ----- Note ----- 796112S Plug-Spark (Used After Code Date 12081200). Used on Type No(s). 3091, 3095. 697451 Plug-Spark Used on Type No(s). 0115, 0144, 0151, 0157, 0158, 0165, 0179, 0180, 0972, 2000, 2006, 2009, 2018, 2019, 2027, 2032, 2033, 2034, 2035, 2036, 2040, 2045, 2046, 2051, 2052, 2061, 2091, 2094, 2095, 2096, 2137, 2207, 2222, 2223, 2224, 2225, 2226, 2238, 3006, 3040, 3052, 3151, 3157, 3165. 697451 Plug-Spark (Used Before Code Date 12081300). Used on Type No(s). 3091, 3095.	535	698369	Filter-Air Cleaner Foam
268	691025	Casing-Control Wire (Cut to Required Length)				536	698472	Cleaner-Air
269	691026	Wire-Control (Cut to Required Length)				578	398153	Wire Assembly ----- Note ----- 590800 Wire Assembly Used on Type No(s). 0171, 2019, 2137, 3089.
270	691027	Nut (Control Wire Casing)				592	690800	Nut (Rewind Starter)
271	691028	Lever-Control				597	691696	Screw (Pawl Friction Plate)
287	691002	Screw (Dipstick Tube)				608	499706	Starter-Rewind (88 5/8" Rope) ----- Note ----- 690101 Starter-Rope (70" Rope) Used on Type No(s). 0002, 0113, 0115, 0116, 0133, 0136, 0137, 0138, 0141, 0144, 0147, 0149, 0152, 0155, 0157, 0158, 0168, 0179, 1513, 2034, 2040, 2051, 2053, 2061, 2090, 2091, 2094, 2137, 2224, 2226, 2233, 2234, 2235, 3040, 3091, 3116, 3136, 3138, 3141, 3152, 3155, 3157, 3233.
300	692307	Muffler (Super Lo Tone)				612	496046S	Tube-Pick Up
300A	394569S	Muffler (Round Lo Tone)				613	691413	Screw (Muffler)
304	694236	Housing-Blower (Compliance Engines) ----- Note ----- 694051 Housing- Blower (Non Compliance Engines) Used on Type No(s). 0002, 0003, 0113, 0115, 0116, 0133, 0136, 0137, 0138, 0141, 0144, 0147, 0149, 0152, 0155, 0157, 0158, 0165, 0168, 0174, 0179, 0180, 1513, 2034, 2040, 2051, 2052, 2053, 2061, 2090, 2091, 2094, 2095, 2207, 2224, 2226, 2233, 2234, 2235, 2239, 2242, 3040, 3052, 3091, 3095, 3116, 3136, 3138, 3141, 3152, 3155, 3157, 3165, 3233, 3239, 3242.	356	692390	Wire-Stop	617	270344S	Seal-O Ring (Intake Manifold)
			358	590777	Gasket Set-Engine	621	692310	Switch-Stop
			362	793351	Shield-Spark Plug	633	691321	Seal-Choke/Throttle Shaft (Throttle)
			363	19069	Puller-Flywheel	635	66538S	Boot-Spark Plug
			365	790029	Screw (Carburetor)	668	692889	Spacer (Cylinder)
			383	89838S	Wrench-Spark Plug	670	691633	Spacer-Fuel Tank
			390	691839	Spring-Choke Diaphragm	676B	393760	Deflector-Muffler
			393	691837	Screen-Carburetor	676C	393756	Deflector-Muffler
			394	795083	Diaphragm-Carburetor	676D	397931	Deflector-Muffler
			426	691107	Screw (Governor Blade)	677	690661	Screw (Muffler Deflector)
			455	691236	Cup-Flywheel			
			456	692299	Plate-Pawl Friction			
			459	281505S	Pawl-Ratchet			
			523	692040	Dipstick			
			523A	691913	Dipstick			
			524	691876	Seal-Dipstick Tube			
			525	691320	Tube-Dipstick			
			529	692189	Grommet			
			534	691417	Screw (Air Cleaner)			
305	692198	Screw (Blower Housing)						
306	690400	Shield-Cylinder						
307	690345	Screw (Cylinder Shield)						
332	690662	Nut (Flywheel)						
333A	591420	Armature-Magneto						
334	691061	Screw (Magneto Armature)						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3916-9 Assemblies include all parts shown in frames. 11/29/2012

09T500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
689	691855	Spring-Friction	836B	691125	Screw (Muffler Guard) (2/3" Long)	957	497929S	Cap-Fuel Tank
718	690959	Pin-Locating (Cylinder)				957A	791129	Cap-Fuel Tank Used on Type No(s). 0116, 0136, 0137, 0138, 2053, 3136.
718A	499047	Pin-Locating (Crankshaft) (Used Before Code Date 08071400).	842	691870	Seal-O Ring (Dipstick Tube)			
			847	691440	Dipstick/Tube Assembly	957B	792878	Cap-Fuel Tank
724	697478	Retainer-Seal	851	493880S	Terminal-Spark Plug	969	799013	Screw (Blower Housing Cover)
729	690586	Clip-Wire	851A	692424	Terminal-Spark Plug			
741	796210	Gear-Timing (Plastic)	868	697338	Seal-Valve	969A	799014	Screw (Blower Housing Cover)
741A	691805	Gear-Timing (Metal)	869	699641	Seat-Valve (Intake)			
745	691146	Screw (Brake) (7/8" Long)	870	699642	Seat-Valve (Exhaust)	976	694394	Primer-Carburetor
745A	690859	Screw (Brake) (1/2" Long)	871	699643	Bushing-Valve Guide (Exhaust Valve)	1005	592366	Fan-Flywheel
					----- Note -----	1036		Label-Emissions (Available From A Briggs & Stratton Authorized Dealer)
772	691111	Screw (Linkage Cover)			63709 Bushing-Valve Guide (Intake Valve)	1058	277038	Operator's Manual
832	699299	Guard-Muffler	913	494409	Seat-Check Valve	1095	498526	Gasket Set-Valve
832C	790743	Guard-Muffler	921A	793973	Cover-Blower Housing	1210	499901	Pulley/Spring Assembly (Pulley)
832D	790744	Guard-Muffler	921B	699796	Cover-Blower Housing			
836	690664	Screw (Muffler Guard) (13/32" Long)	922	692135	Spring-Brake	1211	499901	Pulley/Spring Assembly (Spring)
836A	790745	Screw (Muffler Guard) (1/2" Long)	923	691487	Brake			
			925	691349	Cover-Linkage	1319	794467	Label-Warning
			930	691348	Guard-Rewind	1319A	797669	Label-Warning
			940	691044	Screw (Casing Clamp Bracket)	1330	270962	Repair Manual

Not for
Reproduction

Not for
Reproduction

