

196700

Illustrated Parts List

Model Series

196700

TYPE NUMBERS
0101 through 4519.

TABLE OF CONTENTS


Air Cleaner	4
Alternator	6
Blower Housing/Shrouds	5
Cam	2
Carburetor	3
Controls	4
Crankcase Cover/Sump	2
Crankshaft	2
Cylinder	2
Electric Starter	6
Flywheel	5
Fuel Tank	4
Governor Spring	4
Head	2
Ignition	5
Kits/Gaskets-Carburetor	3
Kits/Gaskets-Valve	2
Muffler	4
Oil	2
Piston Group	2
Rewind	5
Valves	2





PRINTED IN U.S.A.


BRIGGS & STRATTON







COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.




















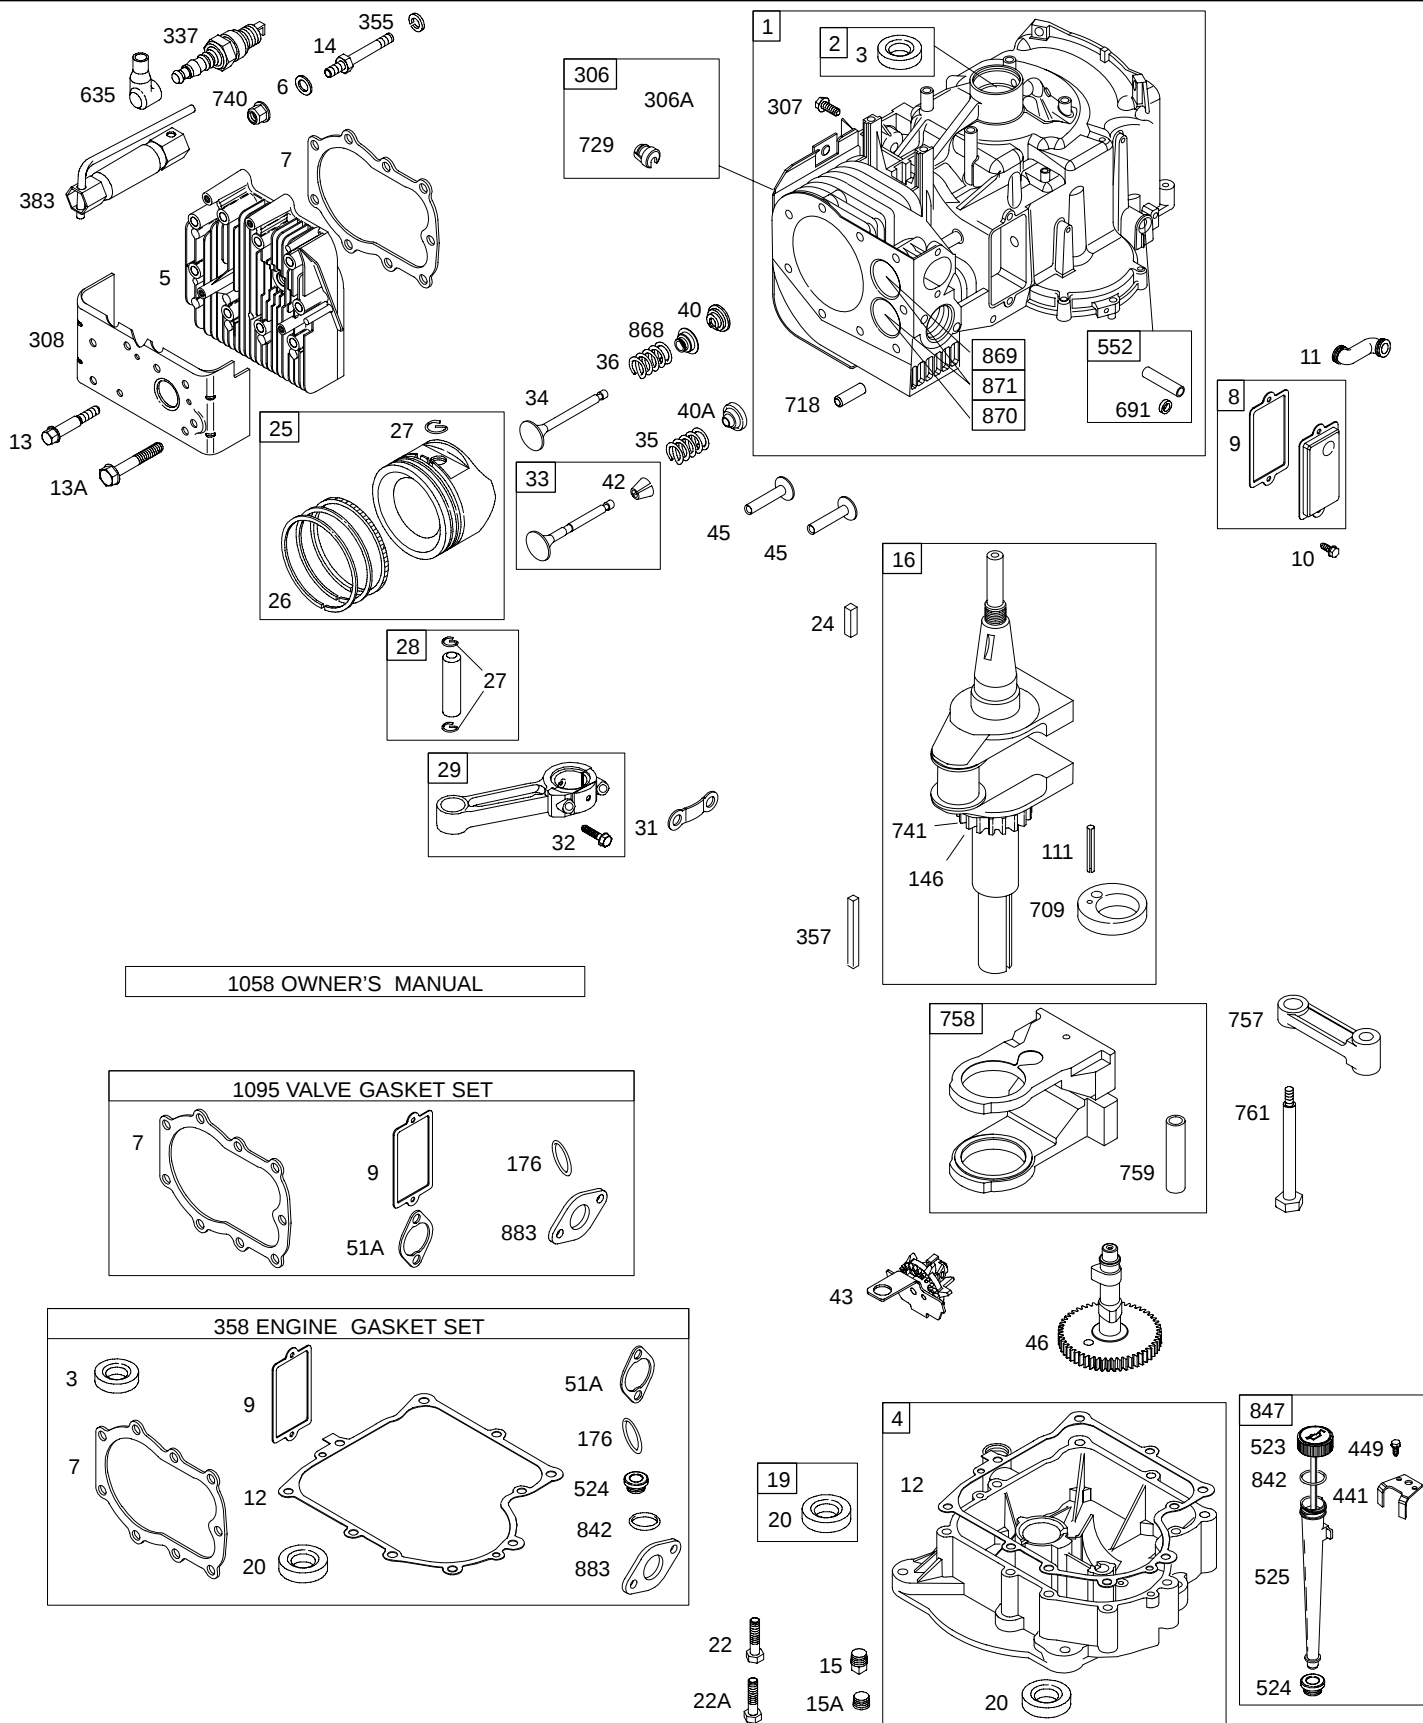


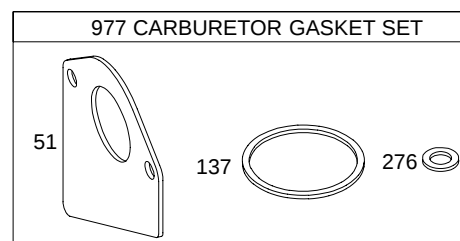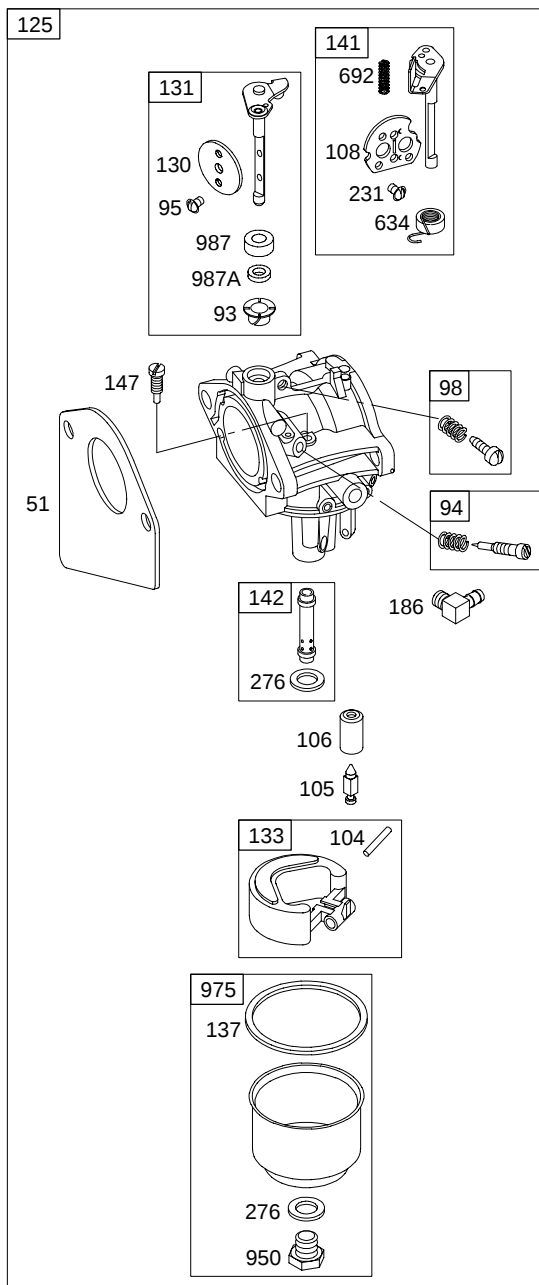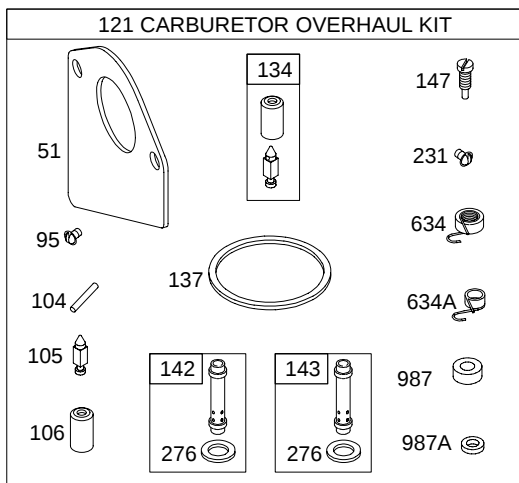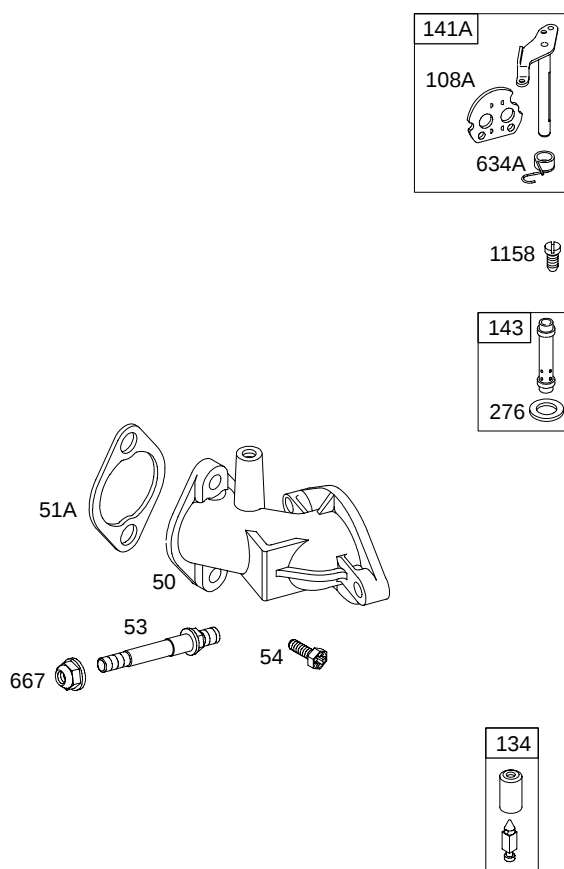

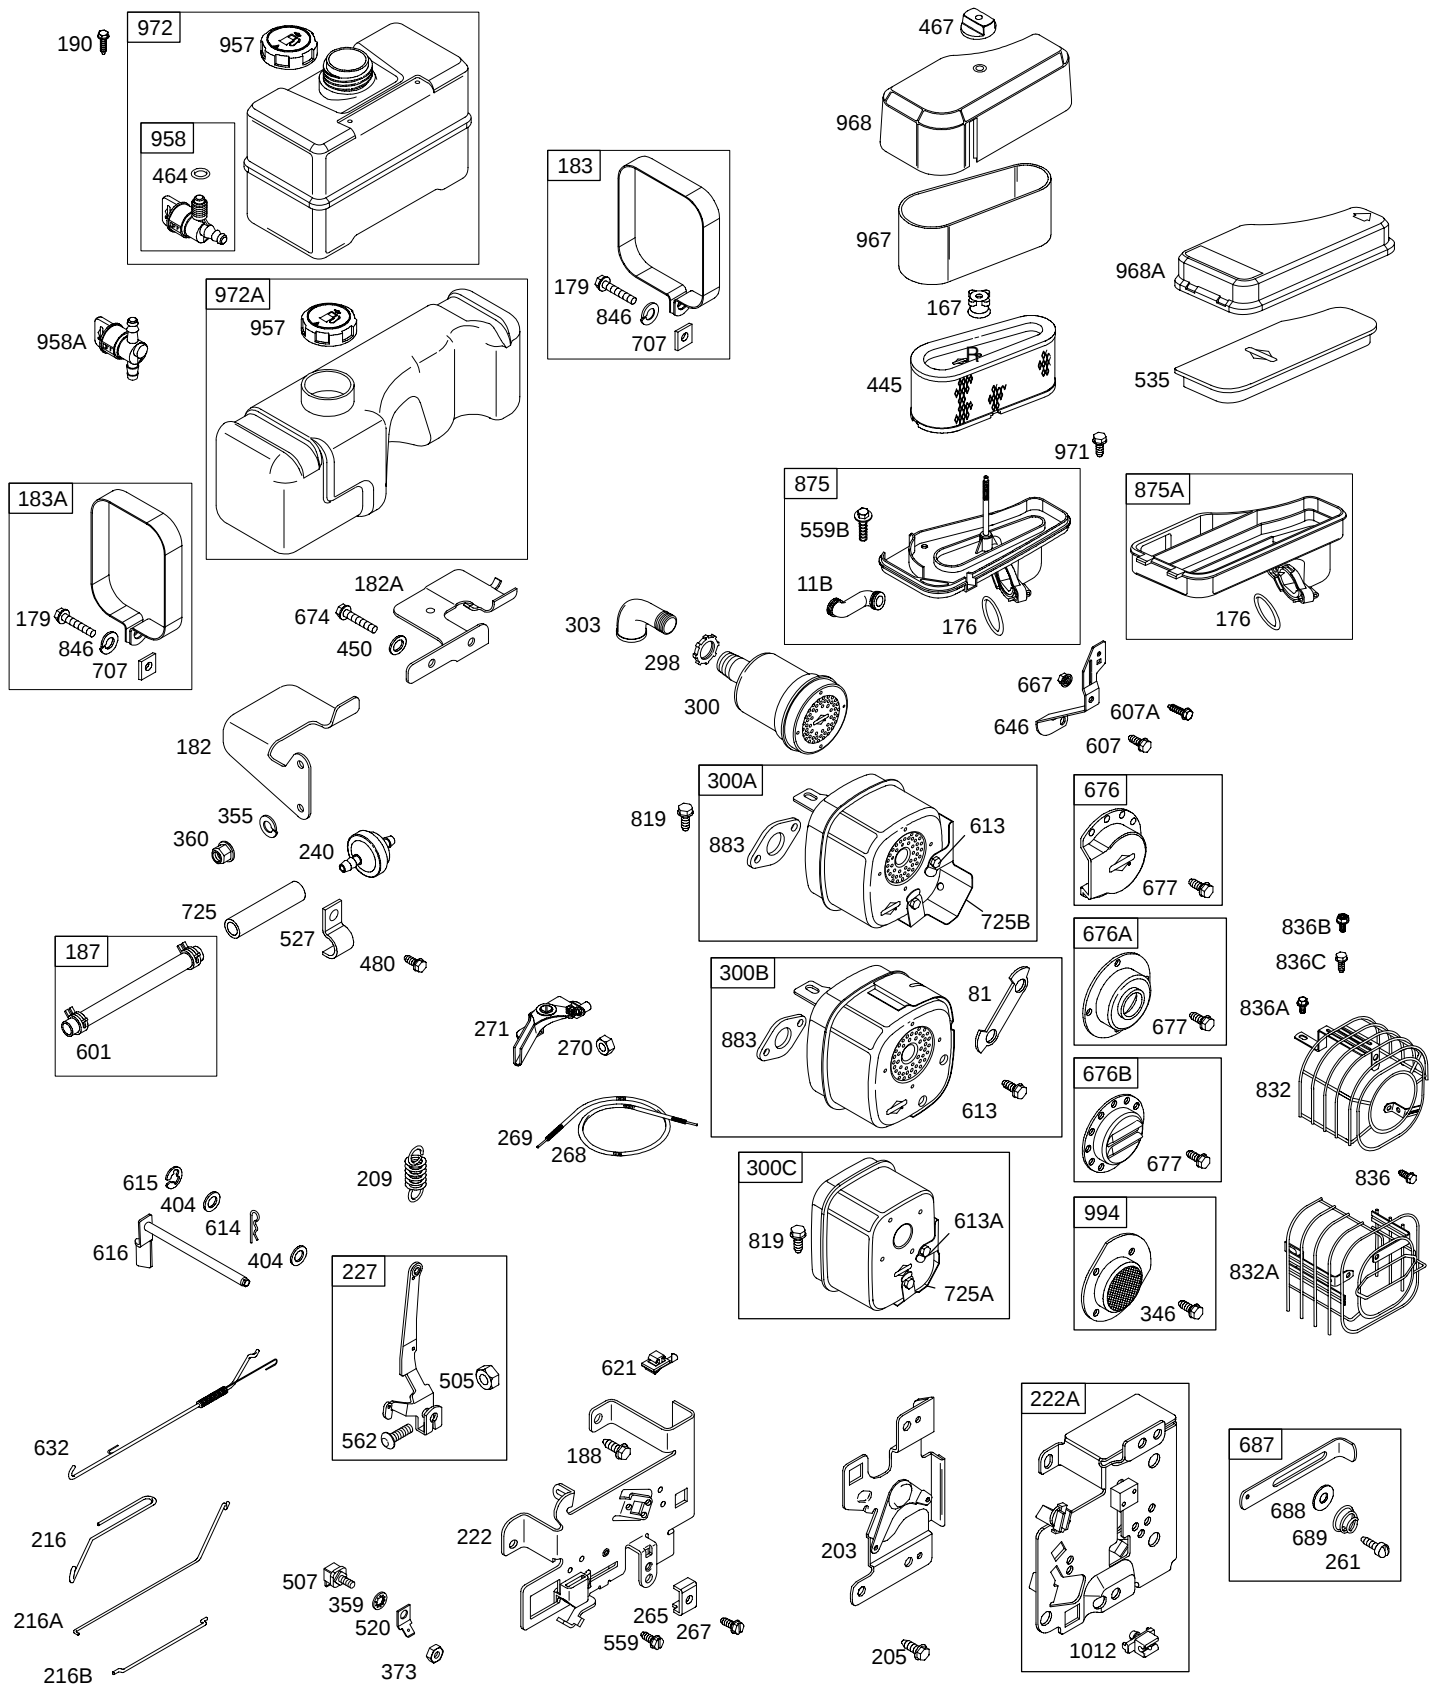

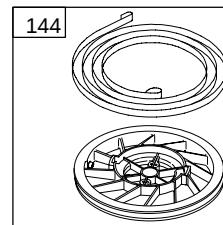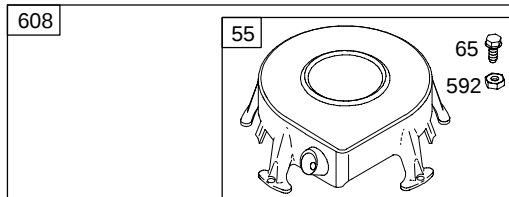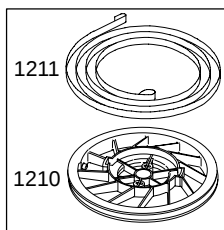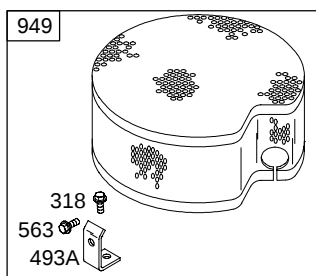

1019 LABEL KIT

     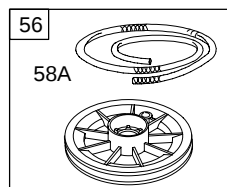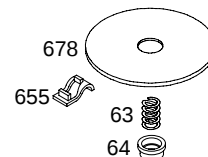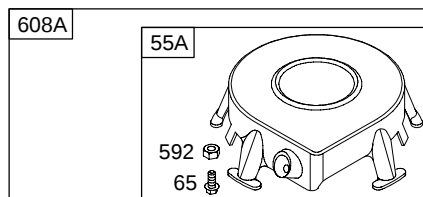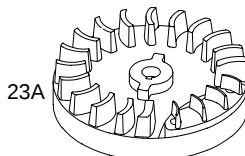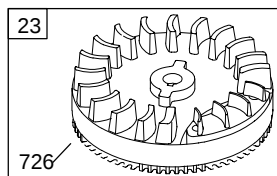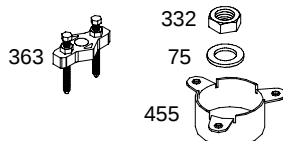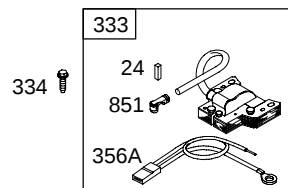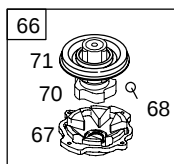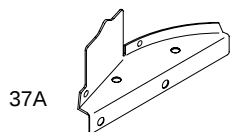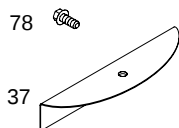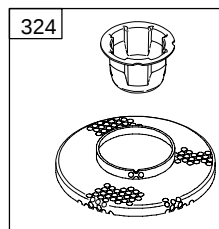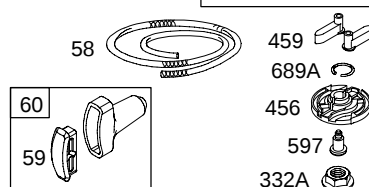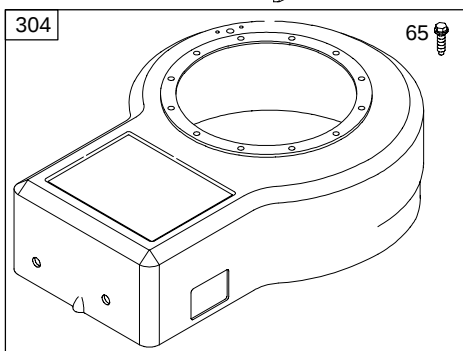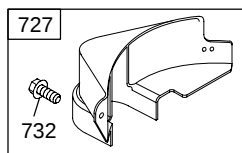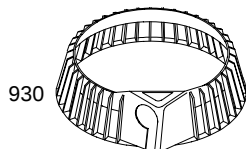


DUAL CIRCUIT	DC ONLY	SEE NOTE 10-13-16 AMP STATOR		SEE NOTE TRI-CIRCUIT / OR 5 AMP AND 9 AMP	
474 877 1059	474A 877A 1059	474B 877B 1059		474C 877C 1059	
		10-13-16 AMP REGULATOR		TRI-CIRCUIT	5 & 9 AMP
878	578	578	526A 501A	878A	526 501



NOTE: THE PROPER FLYWHEEL PART NUMBER AND/OR THE ALTERNATOR
MAGNET SIZE WILL DETERMINE THE ALTERNATOR TYPE OR OUTPUT.
SEE REPAIR MANUAL FOR ADDITIONAL INFORMATION

NOTE: ALL OLD STYLE STATORS USE
REFERENCE NUMBER 1119 MOUNTING SCREW

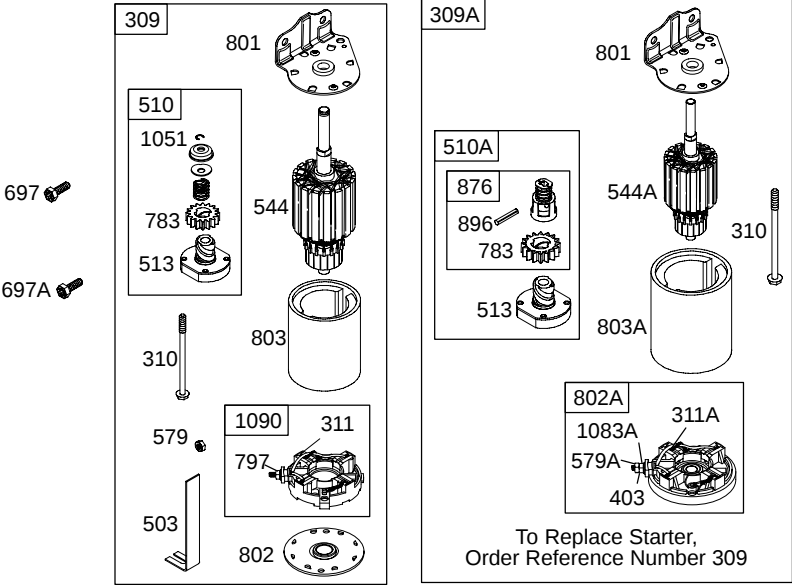

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	495612	Cylinder Assembly (Used After Code Date 92070500). ----- Note ----- 495727 Cylinder Assembly (Used Before Code Date 92070600).	14	691690	Stud (Cylinder Head) (2 1/2" Long) (Used in Position 5 and 6) ----- Note ----- 691109 Stud (Cylinder Head) (3" Long)	23	691354	Flywheel (Electric Start) ----- Note ----- 690626 Flywheel (Electric Start) Used on Type No(s). 0154.
2	495657	Kit-Bushing/Seal (Magneto Side) (Used After Code Date 92070500). ----- Note ----- 399267 Kit-Bushing/Seal (Magneto Side) (Used Before Code Date 92070600).	15	690946	Plug-Oil Drain	23A	690615	Flywheel (Rewind Start)
3	★391086	Seal-Oil (Magneto Side) (Used After Code Date 92070500). ----- Note ----- ★294606 Seal-Oil (Magneto Side) (Used Before Code Date 92070600).	15A	691680	Plug-Oil Drain Used on Type No(s). 0197, 4009.	24	222698	Key-Flywheel
4	392548	Sump-Engine	16	694054	Crankshaft (Used After Code Date 98111600). ----- Note ----- 495629 Crankshaft (Used Before Code Date 98111700 and After Code Date 92070500).	25	499960	Piston Assembly (Standard) ----- Note ----- 499961 Piston Assembly (.010" Oversize) 499962 Piston Assembly (.020" Oversize) 499963 Piston Assembly (.030" Oversize)
5	691715	Head-Cylinder			396876 Crankshaft (Used Before Code Date 92070600).	26	690014	Ring Set (Standard) ----- Note ----- 299743 Ring Set (Standard) (Chrome) 690015 Ring Set (.010" Oversize) 690016 Ring Set (.020" Oversize) 690017 Ring Set (.030" Oversize)
6	691261	Washer (Cylinder Head)			495632 Crankshaft (Used After Code Date 92070500). Used on Type No(s). 0174, 0188, 4011, 4017, 4027.	27	690975	Lock-Piston Pin (Used After Code Date 96102700). ----- Note ----- 691073 Lock-Piston Pin (Used Before Code Date 96102800).
7	Ø★272163	Gasket-Cylinder Head			396877 Crankshaft (Used Before Code Date 92070600). Used on Type No(s). 4011, 4017, 4027.	28	499302	Pin-Piston (Standard) ----- Note ----- 499303 Pin-Piston (.005" Oversize)
8	495735	Breather Assembly	19	295963	Kit-Bushing/Seal (PTO Side)	29	390402	Rod-Connecting (Standard) ----- Note ----- 390773 Rod-Connecting (.020" Undersize)
9	Ø★27803	Gasket-Breather	20	★391086	Seal-Oil (PTO Side)			
10	691666	Screw (Breather Assembly)	22	693972	Screw (Crankcase Cover/Sump)			
11	692293	Tube-Breather	22A	691103	Screw (Crankcase Cover/Sump) (Used in Position 1)			
11B	692253	Tube-Breather						
12	★692221	Crankcase Gasket (.015" Thick) (Standard) ----- Note ----- ★27876 Gasket-Crankcase (.005" Thick) ★27877 Gasket-Crankcase (.009" Thick)						
13	691651	Screw (Cylinder Head) (2 5/8" Long)						
13A	690904	Screw (Cylinder Head) (3" Long)						

★ Engine Gasket Set – Reference 358
● Carburetor Overhaul Kit – Reference 121

◆ Carburetor Gasket Set – Reference 977
Ø Valve Gasket Set – Reference 1095

196700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
31	222114	Lock-Rod Screw	59	490653	Insert-Grip	125	692684	Carburetor (LMT 83, 84, 86, 191, 194)
32	690352	Screw (Connecting Rod)	60	490652	Grip-Starter Rope			----- Note -----
33	691794	Valve-Exhaust	63	690547	Spring-Ratchet			495782 Carburetor (LMT 87, 88, 90)
34	261055	Valve-Intake	64	691920	Adapter-Ratchet Spring			696461 Carburetor Used on Type No(s). 0105, 0139, 0150, 0156, 0164, 0170, 0171, 0174, 0192, 0195, 0198, 0202, 4015, 4025, 4027.
35	691605	Spring-Valve (Intake)	65	690759	Screw (Rewind Starter)	130	690468	Valve-Throttle
36	691597	Spring-Valve (Exhaust)	66	399671	Clutch-Starter	131	494885	Kit-Throttle Shaft
37	690411	Guard-Flywheel	67	394897	Housing-Clutch	133	494381	Float-Carburetor
		----- Note -----	68	691604	Ball-Clutch	134	●494788	Kit-Needle/Seat (Used Before Code Date 92072000).
		692868 Guard-Flywheel	70	691945	Ratchet-Clutch			137 ●494788 Gasket-Float Bowl
		Used on Type No(s). 0140, 0147, 0156.	71	691359	Cover-Ratchet	141	495097	Kit-Choke Shaft (Manual Choke)
37A	690490	Guard-Flywheel	73	691748	Screen-Rotating	141A	495931	Kit-Choke Shaft (Choke A Matic)
37B	690488	Guard-Flywheel	73A	691754	Screen-Rotating	142	●494877	Nozzle-Carburetor (Standard)
40	690656	Retainer-Valve (Intake)	74	691655	Screw (Rotating Screen)	143	●495608	Nozzle-Carburetor (High Altitude)
40A	691939	Retainer-Valve (Exhaust)	74A	691627	Screw (Rotating Screen)	144	697843	Pulley/Spring Assembly
42	494553	Keeper-Valve (Exhaust)	75	690582	Washer (Flywheel)	146	690979	Key-Timing
43	691980	Slinger-Governor/Oil	78	690364	Screw (Flywheel Guard)	147	●497472	Jet-Pilot
45	691793	Tappet-Valve	81	691729	Lock-Muffler Screw	167	692297	Seal-Air Cleaner Nut
46	691167	Camshaft	93	690602	Bushing-Throttle Shaft	176	★691917	Seal-O Ring (Air Cleaner Base)
50	691711	Manifold-Intake	94	494383	Kit-Idle Mixture	179	692331	Screw (Fuel Tank Strap)
51	●692284	Gasket-Intake (Intake Manifold to Carburetor)	95	●691636	Screw (Throttle Valve)	182	691214	Bracket-Fuel Tank (Right Hand)
51A	Ø★272554	Gasket-Intake (Intake Manifold to Cylinder)	98	495800	Kit-Idle Speed (Used After Code Date 92071900).	182A	692867	Bracket-Fuel Tank (Left Hand)
		----- Note -----			398185 Kit-Idle Speed (Used Before Code Date 92072000).	183	692960	Strap-Fuel Tank (Right Hand)
53	690227	Stud (Carburetor)	104	●690525	Pin-Float Hinge	183A	692030	Strap-Fuel Tank (Left Hand)
54	93208	Screw (Intake Manifold)	105	●231855	Valve-Float Needle	186	692317	Connector-Hose
55	693904	Housing-Rewind Starter (Used After Code Date 98111500).	106	●690577	Seat-Inlet (Used After Code Date 92071900).	187	296004	Line-Fuel (Cut to Required Length)
55A	393576	Housing-Rewind Starter (Used Before Code Date 98111600).			----- Note -----	188	691693	Screw (Control Bracket)
56	295871	Pulley-Starter			691901 Seat-Inlet (Used Before Code Date 92072000).	190	690708	Screw (Fuel Tank)
57	490179	Spring-Rewind Starter	108	690464	Valve-Choke (Manual Choke)	203	691381	Crank-Bell
58	693389	Rope-Starter (63" Long)	108A	692344	Valve-Choke (Choke A Matic)	205	691693	Screw (Bell Crank)
58A	695002	Rope-Starter (99" Long)	111	691679	Pin-Retainer			
			121	497535	Kit-Carburetor Overhaul			

★ Engine Gasket Set – Reference 358
● Carburetor Overhaul Kit – Reference 121

◆ Carburetor Gasket Set – Reference 977
Ø Valve Gasket Set – Reference 1095

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
209	690480	Spring–Governor (Red) ----- Note ----- 691795 Spring– Governor (Yellow) Used on Type No(s). 0119, 0131, 0157, 0174, 0188, 4009. 691278 Spring– Governor (Platinum) Used on Type No(s). 4016, 4019. 261194 Spring– Governor Used on Type No(s). 0195.	303	94089	Elbow–Exhaust	383	89838	Wrench–Spark Plug
			304	496832	Housing–Blower (Rewind Starter) ----- Note ----- 496439 Housing Blower (Electric Starter)	403	690288	Washer (End Cap)
			305	692198	Screw (Blower Housing)	404	691691	Washer (Governor Crank)
			306	496797	Shield–Cylinder	441	690593	Bracket–Oil Fill
			306A	224898	Shield–Cylinder	445	691667	Filter–Air Cleaner Cartridge
			307	691003	Screw (Cylinder Shield)	449	690664	Screw (Oil Fill Bracket)
			308	691201	Cover–Cylinder Head	450	691261	Washer (Fuel Tank Bracket) (Rewind Start) ----- Note -----
			309	693054	Motor–Starter			690259 Washer (Fuel Tank Bracket) (Electric Start)
			309A		Motor–Starter (For Replacement Starter Motor, See Ref. 309)	455	691173	Cup–Flywheel
216	690573	Link–Choke	310	690323	Bolt (Starter Motor)	456	692299	Plate–Pawl Friction
216A	692893	Link–Choke				459	281505	Pawl–Ratchet
216B	691281	Link–Choke	311	497608	Brush Set	464	691898	Seal–O Ring (Fuel Shut–Off Valve)
222	694042	Bracket–Control	311A	395538	Brush Set	467	691668	Knob–Air Cleaner
222A	692002	Bracket–Control	318	691617	Screw (Mounting Bracket) (Debris Screen Guard)	474	696459	Alternator (Dual Circuit)
227	691374	Lever–Governor Control				474A	696578	Alternator (DC Only)
231	●691636	Screw (Choke Valve)	324	695160	Screen/Cup Assembly	474B	696458	Alternator (10 To 16 Amp Regulated)
240	298090	Filter–Fuel ----- Note ----- 394358 Filter–Fuel Used on Type No(s). 0198	332	690662	Nut (Flywheel)	474C	696457	Alternator (Tri Circuit)
			332A	693899	Nut (Flywheel)	480	690664	Screw (Tube Clamp)
261	690278	Screw (Control Slide)	333	398811	Armature–Magneto	493	691177	Bracket–Mounting
265	691024	Clamp–Casing	334	691061	Screw (Magneto Armature)	493A	692825	Bracket–Mounting (Debris Screen Guard)
267	690804	Screw (Casing Clamp)	337	802592	Plug–Spark	501	691188	Regulator (5 to 9 Amp)
268	691025	Casing–Control Wire (Cut to Required Length)	346	690661	Screw (Spark Arrester)	501A	691185	Regulator (10 to 16 Amp)
269	691026	Wire–Control (Cut to Required Length)	355	691075	Washer (Muffler Bracket)	503	691532	Strap–Starter
270	691027	Nut (Control Wire Casing)	356A	398808	Wire–Stop	505	691251	Nut (Governor Control Lever)
271	691028	Lever–Control	356B	690799	Wire–Stop	507	691972	Insulator
276	●692255	Washer–Sealing	357	691483	Key–Drive Pulley	510	497606	Drive–Starter
298	690453	Locknut–Muffler/Elbow	358	299577	Gasket Set–Engine	510A	495878	Drive–Starter
300	393010	Muffler (Round Lo Tone)	359	691077	Washer (Ground Terminal)	513	692024	Clutch–Drive
300A	691971	Muffler (Lo Tone)	360	691105	Nut (Fuel Tank Bracket)	520	691084	Terminal–Ground
300B	692304	Muffler (Lo Tone)	363	19165	Flywheel Puller	523	691387	Dipstick
300C	494222	Muffler (Super Lo Tone)	373	691612	Nut (Ground Terminal)	524	★281370	Seal–Dipstick Tube
						525	692963	Tube–Dipstick

★ Engine Gasket Set – Reference 358
● Carburetor Overhaul Kit – Reference 121

◆ Carburetor Gasket Set – Reference 977
Ø Valve Gasket Set – Reference 1095

196700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
526	690326	Screw (Regulator) (1 1/4" Long)	616	692012	Crank-Governor	741	691288	Gear-Timing
526A	690297	Screw (Regulator) (3/8" Long)	621	692310	Switch-Stop	757	691714	Link-Counterweight
527	690394	Clamp-Tube	632	693663	Spring/Link-Mechanical Governor	758	690619	Counterweight
535	272922	Filter-Air Cleaner Foam	634	●690801	Spring/Seal Assembly (Manual Choke)	759	691239	Pin-Counterweight
544	692034	Armature-Starter	634A	●690802	Spring/Seal Assembly (Choke A Matic)	761	690346	Screw (Counterweight)
544A	390837	Armature-Starter	635	66538	Boot-Spark Plug	783	693059	Gear-Pinion
552	491986	Bushing-Governor Crank	646	690465	Brace-Air Cleaner	797	693167	Nut (Brush Retainer)
559	690661	Screw (Remote Choke Stop)	655	691734	Anchor-Rewind Spring	801	691283	Cap-Drive
559B	693675	Screw (Remote Choke Stop)	667	690958	Nut (Air Cleaner Brace)	802	691286	Cap-End
562	691119	Bolt (Governor Control Lever)	674	691058	Screw (Fuel Tank Bracket) (3/4" Long)	802A	395537	Cap-End (Contains Brush Set)
563	690859	Screw (Debris Guard Screen)	----- Note -----			803	693757	Housing-Starter
578	692306	Wire Assembly (DC Only)	676	393757	Deflector-Muffler (Side Out)	803A	398159	Housing-Starter
579	691029	Nut (Starter Cable)	676A	395700	Deflector-Muffler (Direct Out)	813	690635	Clamp
579A	691626	Nut (Starter Cable)	676B	393758	Deflector-Muffler (Louvered)	819	690810	Screw (Muffler Bracket)
592	690800	Nut (Starter Rewind)	677	690661	Screw (Muffler Deflector)	832	691988	Guard-Muffler
597	691696	Screw (Pawl Friction Plate)	678	490817	Spacer-Rewind	832A	690858	Guard-Muffler
601	95162	Clamp-Hose	687	691949	Slide-Control	836	690367	Screw (Muffler Guard) (9/16" Long)
607	690703	Screw (Air Cleaner Brace) (7/16" Long)	688	690395	Cap-Friction	836A	695669	Screw (Muffler Guard) (7/16" Long)
607A	691693	Screw (Air Cleaner Brace) (3/8" Long)	689	690529	Spring-Friction	836B	695669	Screw (Muffler Guard) (1/2" Long)
608	693900	Starter-Rewind (63" Long) (Used After Code Date 98111500).	689A	691855	Spring-Friction	836C	690810	Screw (Muffler Guard) (5/8" Long)
608A	390391	Starter-Rewind (75" Long) (Used Before Code Date 98111600).	691	692407	Seal-Governor Shaft	842	★691870	Seal-O Ring (Dipstick Tube)
613	691632	Screw (Muffler)	692	690572	Spring-Detent	846	90832	Washer (Fuel Tank Strap)
613A	691351	Screw (Muffler)	697	691058	Screw (Drive Cap) (3/4" Long)	847	392066	Dipstick/Tube Assembly
614	691620	Pin-Cotter	697A	690372	Screw (Drive Cap) (11/16" Long)	851	493880	Terminal-Spark Plug
615	93307	Retainer-Governor Shaft	707	690279	Nut (Fuel Tank Strap)	868	692036	Seal-Valve
			709	691268	Eccentric	869	691703	Seat-Valve (Intake)
			718	690959	Pin-Locating	870	691703	Seat-Valve (Exhaust)
			725	690403	Shield-Heat	871	261961	Bushing-Valve Guide (Exhaust)
			725A	690433	Shield-Heat	----- Note -----		
			725B	690431	Shield-Heat	231218 Bushing- Valve Guide (Intake)		
			726	399676	Gear-Ring (Includes Mounting Hardware)			
			727	395405	Cover-Starter Drive			
			729	690596	Clip-Wire			
			732	691097	Screw (Starter Drive Cover)			
			740	691105	Nut (Muffler Bracket)			

★ Engine Gasket Set – Reference 358
● Carburetor Overhaul Kit – Reference 121

◆ Carburetor Gasket Set – Reference 977
Ø Valve Gasket Set – Reference 1095

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
875	693670	Base–Air Cleaner	949	397530	Guard–Debris Screen	1059	698516	Kit–Screw/Washer (Alternator)
875A	494745	Base–Air Cleaner	950	691657	Screw–Float Bowl	1083A	690958	Nut (End Cap) (Serrated)
876	495877	Kit–Pinion Spring	957	493988	Cap–Fuel Tank	1090	691293	Retainer–Brush
877	393456	Wire/Connector– Alternator (Dual Circuit)	958	399517	Valve–Fuel Shut Off	1095	498536	Gasket Set–Valve
877A	393814	Wire/Connector– Alternator (DC Only)	958A	698183	Valve–Fuel Shut Off	1119	691183	Screw (Alternator)
877B	399916	Wire/Connector– Alternator (10 To 16 Amp)	967	272477	Filter–Pre Cleaner	1158	695659	Screw (Carburetor Plug)
877C	393537	Wire/Connector– Alternator (Tri Circuit) (5 To 9 Amp)	968	691324	Cover–Air Cleaner	1210	498144	Pulley/Spring Assembly (Pulley) (Used After Code Date 00082000 and Before Code Date 01051100).
878	691237	Harness–Alternator (Dual Circuit)	968A	281108	Cover–Air Cleaner	1211	498144	Pulley/Spring Assembly (Spring) (Used After Code Date 00082000 and Before Code Date 01051100).
878A	691955	Harness–Alternator (Tri Circuit)	971	691108	Screw (Air Cleaner Base to Carburetor)			
883	692237	Gasket–Exhaust	972	691993	Tank–Fuel (4 Quart)			
896	691641	Pin–Drive Retainer	972A	390225	Tank–Fuel (3 Quart)			
920	691656	Solenoid–Starter	975	495933	Bowl–Float			
930	691904	Guard–Rewind	977	494385	Gasket Set–Carburetor			
			987	691326	Seal–Throttle Shaft			
			987A	692001	Seal–Throttle Shaft			
			994	399541	Arrestor–Spark			
			1012	690585	Retainer–Link			
			1019	491185	Kit–Label			
			1051	691265	Ring–Retaining			
			1054	280275	Tie–Cable			
			1058	272697	Owner's Manual			

★ Engine Gasket Set – Reference 358
 ● Carburetor Overhaul Kit – Reference 121

◆ Carburetor Gasket Set – Reference 977
 ◇ Valve Gasket Set – Reference 1095