



Illustrated Parts List

Model Series

12L800

TYPE NUMBERS
0805 through 3104.


TABLE OF CONTENTS

Alternator	7
Air Cleaner	4
Blower Housing/Shrouds	6
Camshaft	2
Carburetor	3
Controls	5
Crankshaft	2
Cylinder	2
Electric Starter	7
Electrical	7
Engine Sump	2
Exhaust System	4
Flywheel	7
Flywheel Brake	7
Fuel Supply	5
Governor Spring	5
Ignition	7
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	6
Valves	2



PRINTED IN U.S.A.





COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



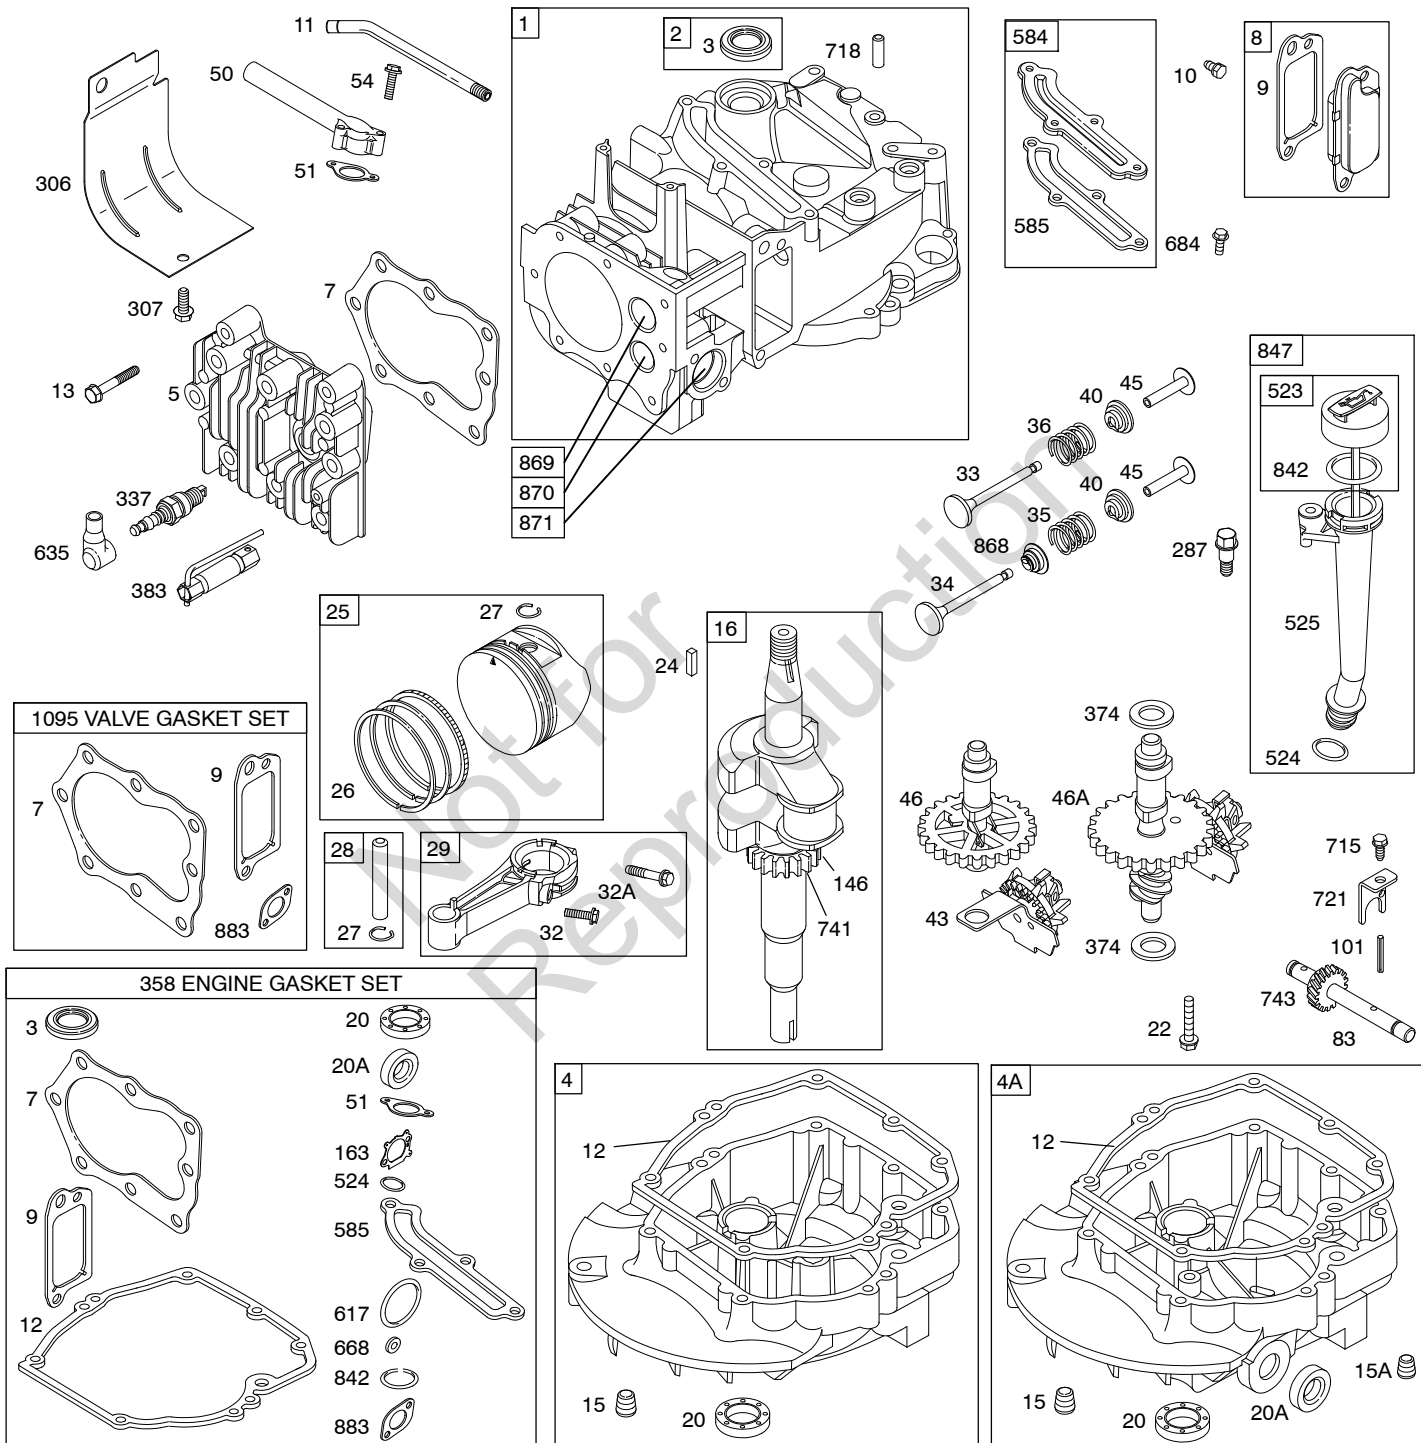


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.













Assemblies include all parts shown in frames.


12/06/2011

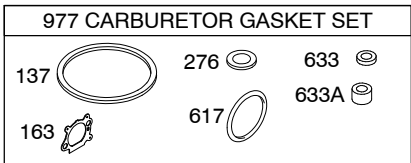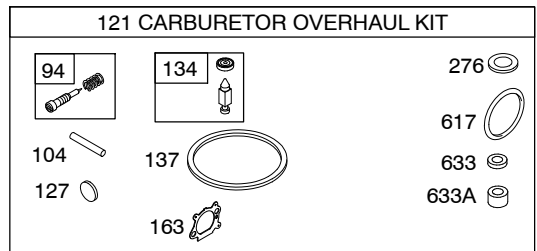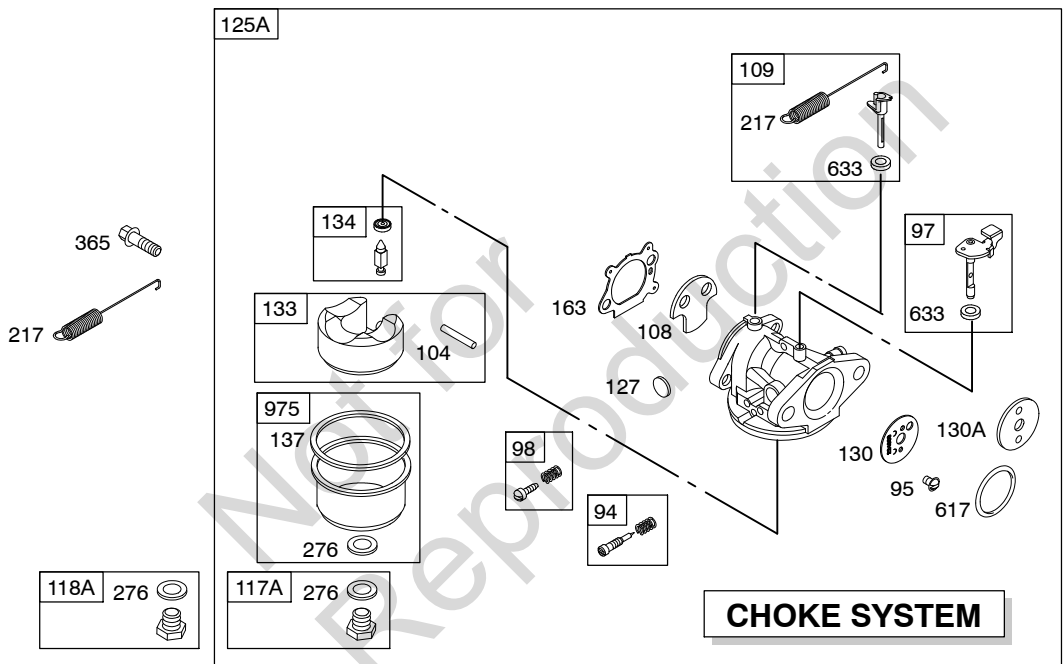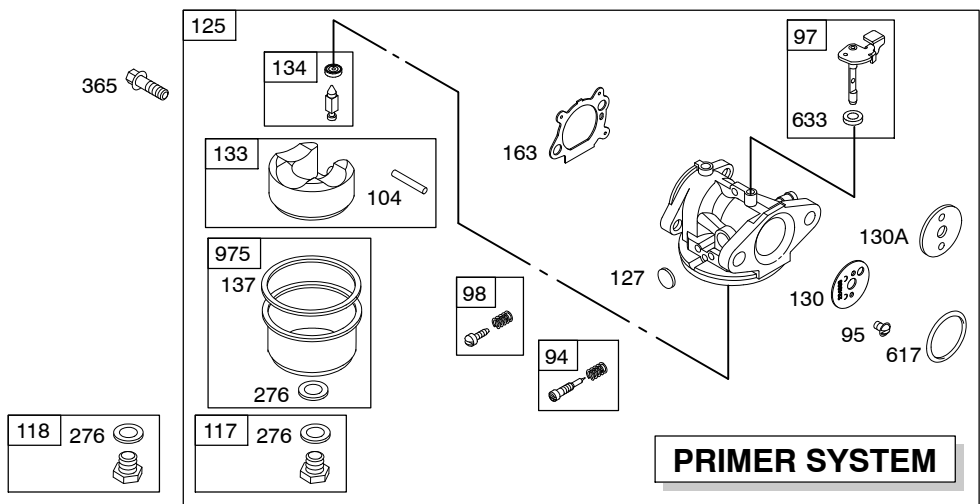


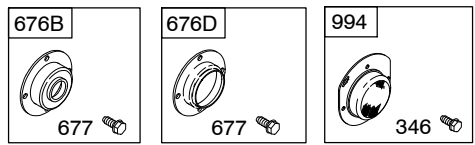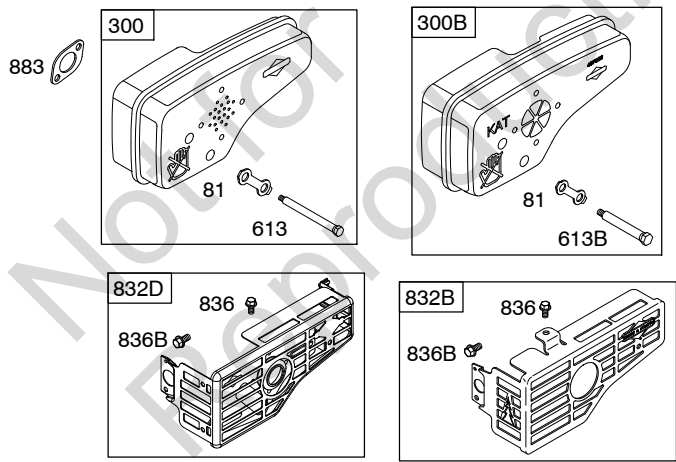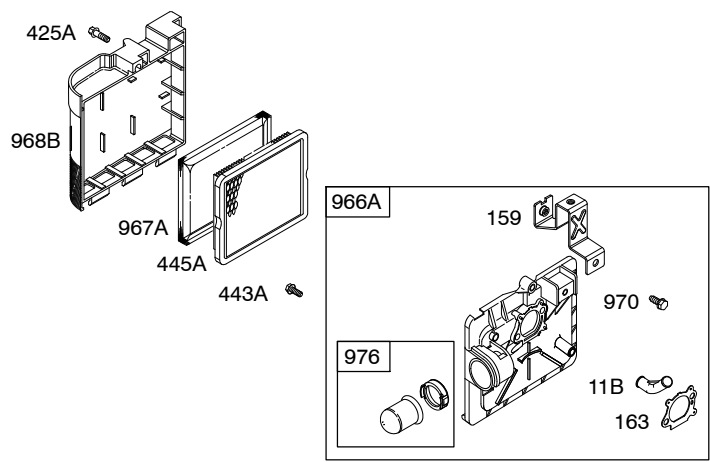

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

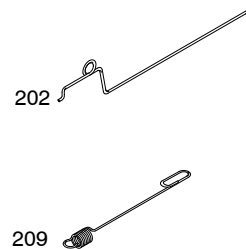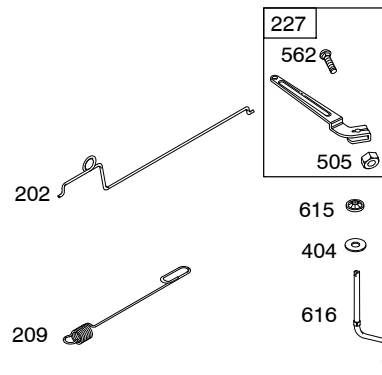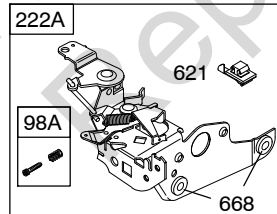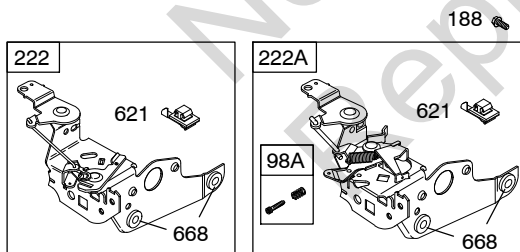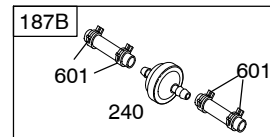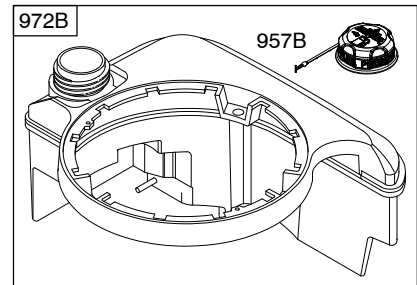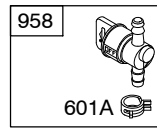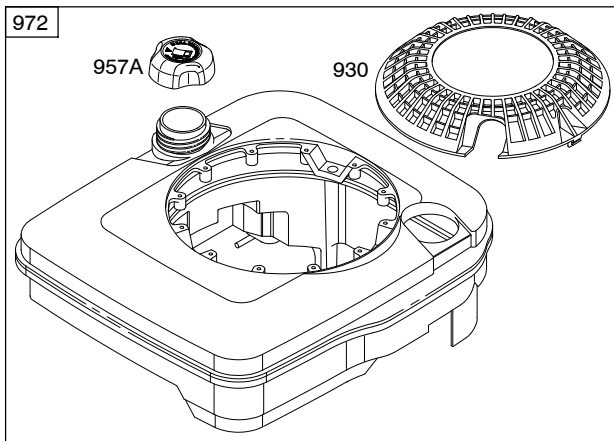

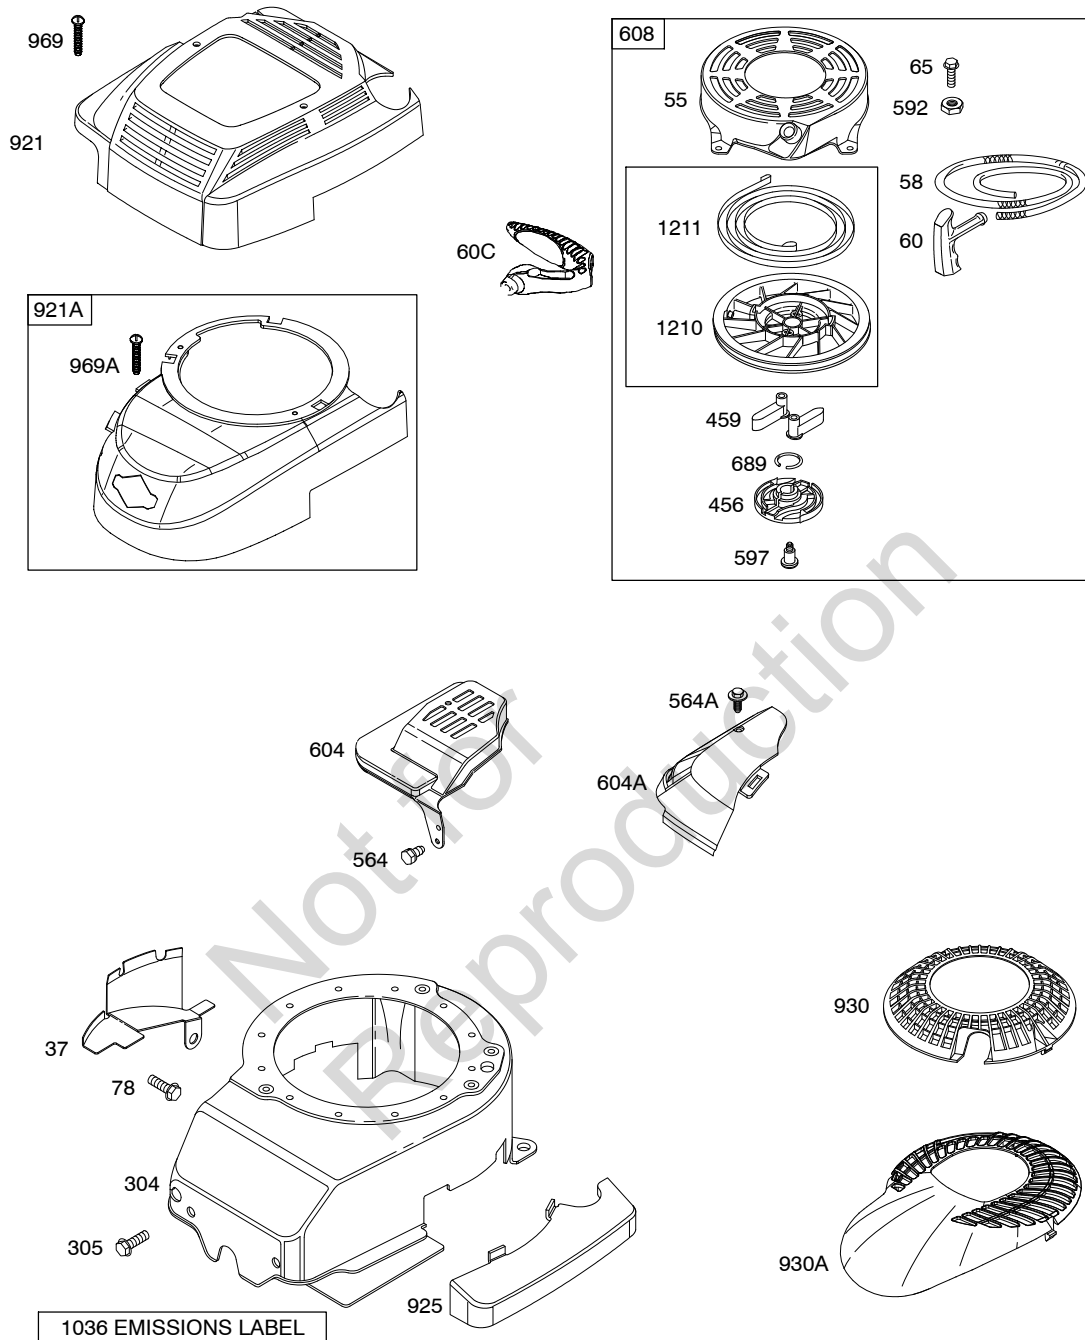

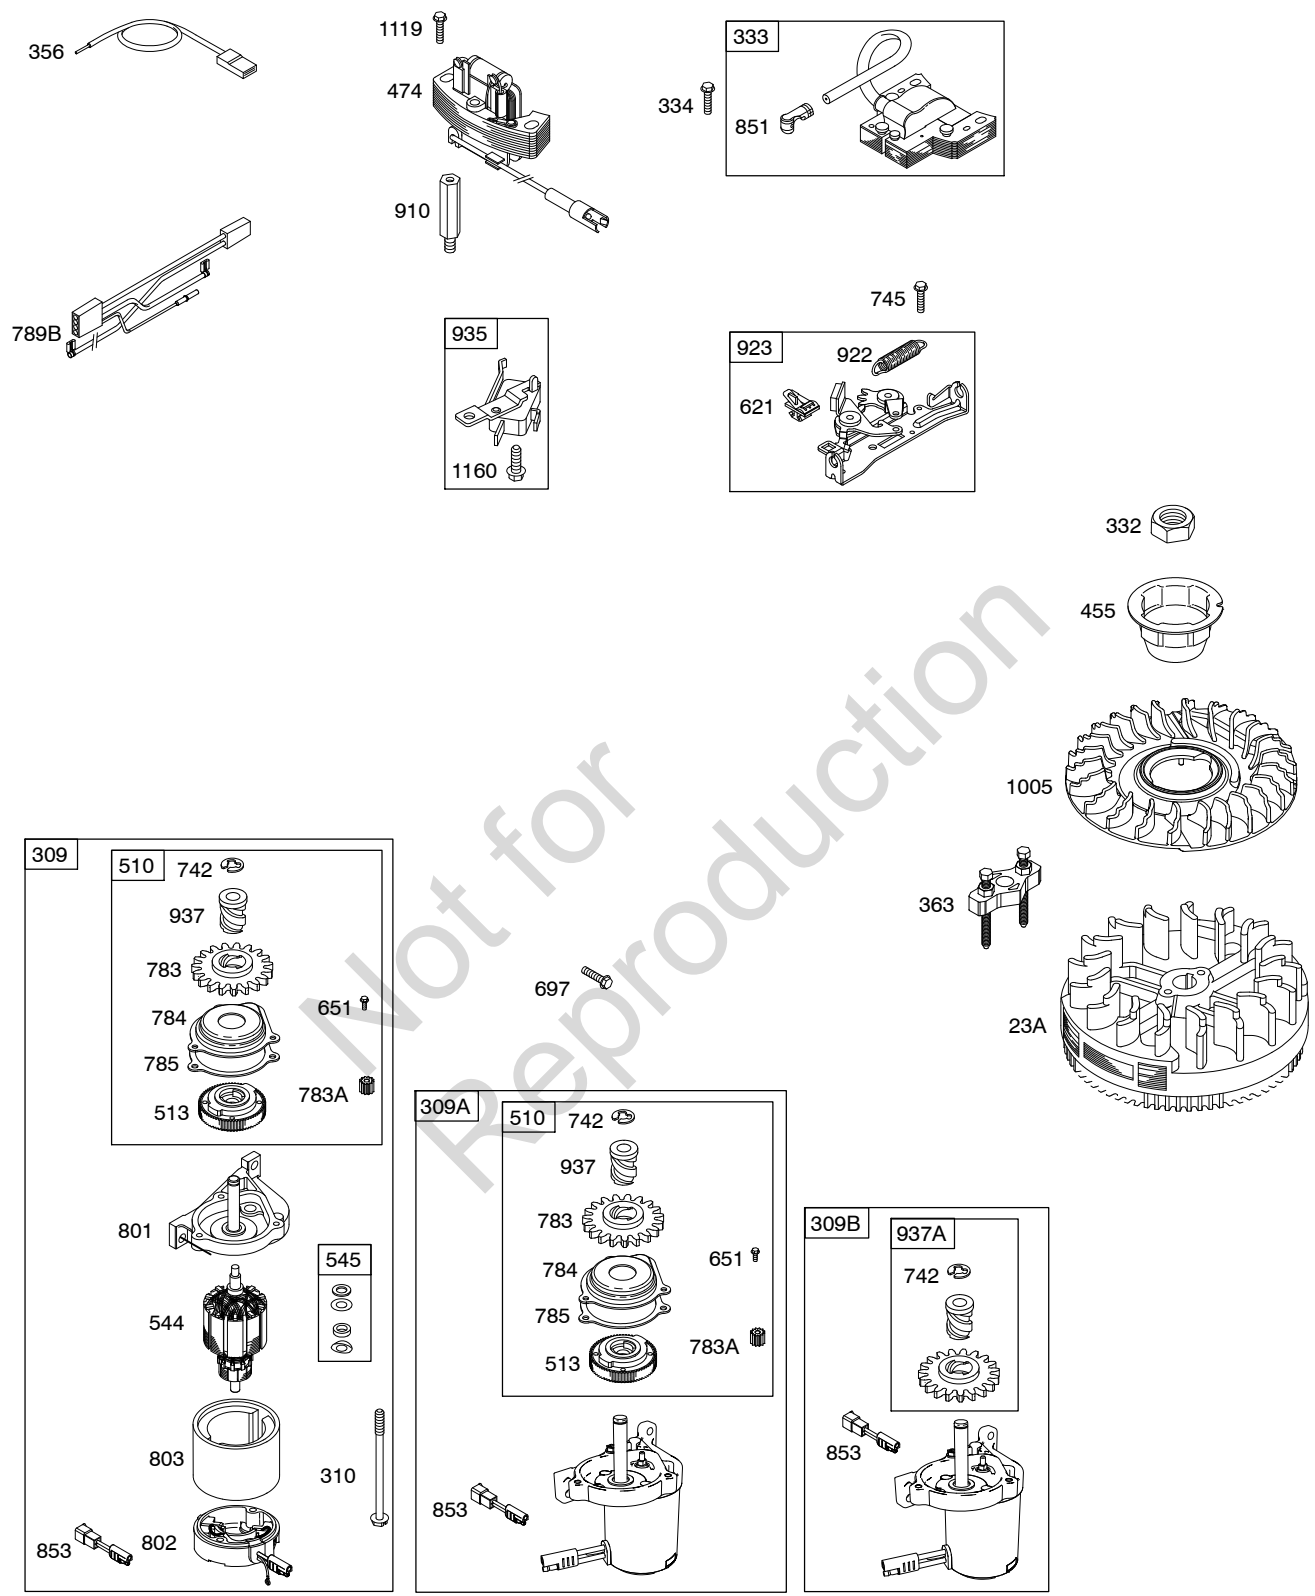

12L800

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	590401	Cylinder Assembly (Used After Code Date 11063000). ----- Note ----- 697324 Cylinder Assembly (Used Before Code Date 11070100).	9	★ 699472	Gasket-Breather (Used After Code Date 11063000). ----- Note ----- 699833 Gasket-Breather (Used Before Code Date 11070100).	20	★ 399781S	Seal-Oil (PTO Side)
2	399269	Kit-Bushing/Seal (Magneto Side)	10	94650	Screw (Breather Assembly)	20A	★ 691952	Seal-Oil (PTO Side) (Auxiliary PTO)
3	★ 299819S	Seal-Oil (Magneto Side)	11	691781	Tube-Breather	22	691092	Screw (Crankcase Cover/Sump)
4	493279	Sump-Engine	11B	691923	Tube-Breather	23A	691987	Flywheel ----- Note ----- 691992 Flywheel Used on Type No(s). 0805, 0806.
4A	493365	Sump-Engine (Auxilliary PTO)	12	★ 692232	Gasket-Crankcase	24	222698S	Key-Flywheel
5	590411	Head-Cylinder (Used After Code Date 11063000). ----- Note ----- 691160 Head-Cylinder (Used Before Code Date 11070100).	13	590422	Screw (Cylinder Head) (Used After Code Date 11063000). ----- Note ----- 690912 Screw (Cylinder Head) (Used Before Code Date 11070100).	20	★ 399781S	Seal-Oil (PTO Side)
7	★ 799875	Gasket-Cylinder Head (Used After Code Date 11063000). ----- Note ----- 692249 Gasket-Cylinder Head (Used Before Code Date 11070100).	15	691680	Plug-Oil Drain (Square Socket)	20A	★ 691952	Seal-Oil (PTO Side) (Auxiliary PTO)
8	590395	Breather Assembly (Used After Code Date 11063000). ----- Note ----- 695250 Beather-Assembly (Used Before Code Date 11070100).	15A	691093	Plug-Oil Drain (Hex Socket)	22	691092	Screw (Crankcase Cover/Sump)
			16	691454	Crankshaft ----- Note ----- 691451 Crankshaft Used on Type No(s). 0806, 1507, 1508, 1509, 1562. 691452 Crankshaft Used on Type No(s). 0805, 1505, 1506, 2304, 2604, 3104.	23A	691987	Flywheel ----- Note ----- 691992 Flywheel Used on Type No(s). 0662, 0838, 0880, 0882, 0883, 0897, 0899, 0900, 1139, 1140, 1141, 1378, 1927, 1953, 2000, 2319. 696291 Flywheel Used on Type No(s). 3165.
						24	222698S	Key-Flywheel

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

2271-8

Assemblies include all parts shown in frames.

12/06/2011

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
25	590404	Piston Assembly (Standard) (Used After Code Date 11063000). ----- Note ----- 797302 Piston Assembly (Standard) (Used After Code Date 09041600 and Before Code Date 11070100). 795429 Piston Assembly (Standard) (Used After Code Date 07090300 and Before Code Date 09041700). 791096 Piston Assembly (Standard) (Used Before Code Date 07090400). 590405 Piston Assembly (.020" Oversize) (Used After Code Date 11063000). 797303 Piston Assembly (.020" Oversize) (Used After Code Date 09041600 and Before Code Date 11070100). 795430 Piston Assembly (.020" Oversize) (Used After Code Date 07090300 and Before Code Date 07090400). 791325 Piston Assembly (.020" Oversize) (Used Before Code Date 07090400).	26	590402	Ring Set (Standard) (Used After Code Date 11063000). ----- Note ----- 797304 Ring Set (Standard) (Used After Code Date 09041600 and Before Code Date 11070100). 795431 Ring Set (Standard) (Used After Code Date 07090300 and Before Code Date 09041700). 791098 Ring Set (Standard) (Used After Code Date 04031400 and Before Code Date 07090400). 499425 Ring Set (Standard) (Used Before Code Date 04031500). 590403 Ring Set (.020" Oversize) (Used After Code Date 11063000). 797305 Ring Set (.020" Oversize) (Used After Code Date 09041600 and Before Code Date 11070100). 795432 Ring Set (.020" Oversize) (Used After Code Date 07090300 and Before Code Date 09041700). 791324 Ring Set (.020" Oversize) (Used After Code Date 04102100 and Before Code Date 07090400). 499427 Ring Set (.020" Oversize) (Used Before Code Date 04102200).	27	691588	Lock-Piston Pin (Used After Code Date 09041600). ----- Note ----- 691866 Lock-Piston Pin (Used Before Code Date 09041700). 28298909Pin-Piston (Used After Code Date 09041600). ----- Note ----- 499423 Pin-Piston (Used Before Code Date 09041700). 29797306Rod-Connecting (Used After Code Date 09041600). ----- Note ----- 499424 Rod- Connecting (Used Before Code Date 09041700). 32691664Screw (Connecting Rod) 32A695759Screw (Connecting Rod) (Used After Code Date 00042200). 33590394Valve-Exhaust (Used After Code Date 11063000). ----- Note ----- 260651S Valve-Ex- haust (Used Before Code Date 11070100). 34590393Valve-Intake (Used After Code Date 11063000). ----- Note ----- 262652S Valve-Intake (Used Before Code Date 11070100).

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

12L800

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
35	691270	Spring-Valve (Intake)	104	●691242	Pin-Float Hinge	125	698444	Carburetor (Primer System)
36	691270	Spring-Valve (Exhaust)	108	691182	Valve-Choke	125A	498964	Carburetor (Choke System)
37	694086	Guard-Flywheel	109	494218	Shaft-Choke			(Used After Code Date 96060200).
40	692194	Retainer-Valve	117	494870	Jet-Main (Standard)			----- Note -----
43	691997	Slinger-Governor/Oil			(Used After Code Date 02092900).			497353 Carburetor (Choke System)
45	690548	Tappet-Valve			----- Note -----			(Used Before Code Date 96060300).
46	691449	Camshaft			498975 Jet-Main (Standard)			
46A	691459	Camshaft			(Used Before Code Date 02093000).			
45	690548	Tappet-Valve	117A	498976	Jet-Main (Standard)	127	●694468	Plug-Welch
50	497465	Manifold-Intake			(Used After Code Date 96060200).	130	691203	Valve-Throttle
51	★272199S	Gasket-Intake			----- Note -----			696564 Valve-Throttle (Used With Plastic Throttle Shaft)
54	691650	Screw (Intake Manifold)			496063 Jet-Main (Standard)	130A	691181	Valve-Throttle
55	691421	Housing-Rewind Starter			(Used Before Code Date 96060300).	133	398187	Float-Carburetor
58	280399S	Rope-Starter (Cut To Required Length)			----- Note -----	137	●●796610	Gasket-Float Bowl (1/8" Thick)
60	281434S	Grip-Starter Rope	118	497315	Jet-Main (High Altitude)			----- Note -----
60C	799716	Grip-Starter Rope			(Used After Code Date 02092900).			693981 Gasket-Float Bowl (1/16" Thick)
65	690837	Screw (Rewind Starter)			----- Note -----			
78	691108	Screw (Flywheel Guard)			496495 Jet-Main (High Altitude)	134	●398188	Kit-Needle/Seal
81	691740	Lock-Muffler Screw			(Used Before Code Date 02093000).	146	690979	Key-Timing
83	691778	Shaft-Auxiliary Drive			----- Note -----	159	691753	Bracket-Air Cleaner Primer
94	●493765	Kit-Idle Mixture			497315 Jet-Main (High Altitude)			163★●◆272653 Gasket-Air Cleaner
95	691636	Screw (Throttle Valve)	118A	498977	Jet-Main (High Altitude)	187	791766	Line-Fuel (Cut to Required Length)
97	493267	Shaft-Throttle (Metal)			(Used After Code Date 96060200).			187A 791873 Line-Fuel (Molded)
		----- Note -----			----- Note -----			187B 791891 Line-Fuel (Includes Filter)
		696565 Shaft-Throttle (Plastic)			497315 Jet-Main (High Altitude)			188 690877 Screw (Control Bracket)
98	398185	Kit-Idle Speed (Carburetor)			(Used Before Code Date 96060300).			
98A	493280	Kit-Idle Speed	121	498260	Kit-Carburetor Overhaul			
101	691623	Pin-Shaft						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

2271-10

Assemblies include all parts shown in frames.

12/06/2011

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
190	690940	Screw (Fuel Tank)	300	496106S	Muffler (Tuned)	356	692390	Wire-Stop
202	691829	Link-Mechanical Governor	300B	497681	Muffler (Catalyst)	358	590508	Gasket Set-Engine (Used After Code Date 11063000).
209	691292	Spring-Governor	304	493293	Housing-Blower	----- Note -----		
		----- Note -----			----- Note -----			794307 Gasket
		691835 Spring-Governor			493294 Housing-Blower			Set-Engine
		Used on Type No(s). 0805, 0806, 1505, 1506, 1507, 1508.			Used on Type No(s). 0805, 0806.			(Used Before Code Date 11070100).
		262663 Spring-Governor	305	691108	Screw	363	19069	Flywheel Puller
		Used on Type No(s). 1509, 1562.			(Blower Housing)	365	691688	Screw
217	690354	Spring-Choke Return	306	690450	Shield-Cylinder			(Carburetor)
222	790143	Bracket-Control (Remote/Manual Friction)(Primer)	307	690345	Screw	374	691074	Washer
222A	692021	Bracket-Control (Remote Choke A Matic,Non Compliance)	309	695550	Motor-Starter (Used Before Code Date 07052900).			(Camshaft)
			309A	795092	Motor-Starter (Used After Code Date 07052800 and Before Code Date 10112800).	383	89838S	Wrench-Spark Plug
			309B	799045	Motor-Starter (Used After Code Date 10112700).	404	690272	Washer
227	690783	Lever-Governor Control						(Governor Crank)
240	298090S	Filter-Fuel	310	692327	Bolt	425A	690670	Screw
265	690798	Clamp-Casing			(Starter Motor)			(Air Cleaner Cover)
267	691044	Screw	332	690662	Nut	443A	692523	Screw
		(Casing Clamp)			(Flywheel)			(Air Cleaner Primer Base)
268	691025	Casing-Control Wire (Cut to Required Length)	333	802574	Armature-Magneto	445A	491588S	Filter-Air Cleaner Cartridge
			334	691061	Screw	455	791960	Cup-Flywheel
					(Magneto Armature)	456	692299	Plate-Pawl Friction
269	691026	Wire-Control (Cut to Required Length)	337	799876	Plug-Spark (Used After Code Date 11063000).	459	281505S	Plate-Ratchet
					----- Note -----	474	691991	Alternator
270	691027	Nut			802592S Plug-Spark	505	691251	Nut
		(Control Wire Casing)			(Used Before Code Date 11070100).			(Governor Control Lever)
271	691028	Lever-Control				510	795093	Drive-Starter
276 ♦	271716	Washer-Sealing				513	692358	Clutch-Drive
287	690940	Screw	346	690661	Screw	523	499621	Dipstick
		(Dipstick Tube)			(Spark Arrestor)	524	★692296	Seal-Dipstick Tube
						525	495265	Tube-Dipstick
						544	690786	Armature-Starter
						545	492919	Washer Set
								(Starter Motor)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

12L800

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
562	691119	Bolt (Governor Control Lever)	677	690661	Screw (Muffler Deflector)	784	795095	Cover-Starter Gear
564	691132	Screw (Control Cover)	684	690345	Screw (Breather Passage Cover)	785	692352	Gasket-Starter Cover
564A	691142	Screw (Control Cover)	689	691855	Spring-Friction	789B	696547	Harness-Wiring
584	697734	Cover-Breather Passage	697	691127	Screw (Drive Cap)	801	690782	Cap-Drive
585	★691879	Gasket-Breather Passage	715	691147	Screw (Shaft Stop)	802	695267	Cap-End (Used After Code Date 00040600).
592	690800	Nut (Rewind Starter)	718	690959	Pin-Locating	----- Note -----		
597	691696	Screw (Pawl Friction Plate)	721	690449	Stop-Shaft	695975 Cap-End (Used Before Code Date 00040700).		
601	791850	Clamp-Hose	741	797521	Gear-Timing (Metal) (Used After Code Date 08021700).	803	695266	Housing-Starter (Used After Code Date 00040600).
601A	691038	Clamp-Hose	----- Note -----			695975 Housing-Starter (Used Before Code Date 00040700).		
604	691757	Cover-Control	795755 Gear-Timing (Plastic) (Used After Code Date 08021700).			832B	497683	Guard-Muffler (Catalyst)
604A	691344	Cover-Control	794388 Gear-Timing (Use Without Woodruff Key) (Used After Code Date 07093000 and Before Code Date 08021800).			832D	499034	Guard-Muffler (Tuned)
608	497680	Starter-Rewind	790345 Gear-Timing (Use Without Woodruff Key) (Used Before Code Date 07100100).			836	690664	Screw (Muffler Guard)
613	691340	Screw (Muffler)	691830 Gear-Timing (Uses Woodruff Key)			836B	691147	Screw (Muffler Guard)
613B	691114	Screw (Muffler)	742	93941	Retainer-E Ring	842	★691031	Seal-O Ring (Dipstick Tube)
615	690340	Retainer-Governor Shaft	743	691772	Gear-Drive	847	692047	Dipstick/Tube Assembly
616	698801	Crank-Governor	745	691648	Screw (Brake)	851	493880S	Terminal-Spark Plug
617★◆270344		Seal-O Ring (Intake Manifold)	783	691918	Gear-Pinion (19 Teeth) (Starter Drive)	853	695268	Adapter-Wire
621	692310	Switch-Stop	783A	691269	Gear-Pinion (12 Teeth)	868	590410	Seal-Valve (Used After Code Date 11063000).
633 ◆691321		Seal-Choke/Throttle Shaft	----- Note -----			697338 Seal-Valve (Used Before Code Date 11070100).		
633A ◆693867		Seal-Choke/Throttle Shaft				869	691155	Seat-Valve (Intake)
635	66538S	Boot-Spark Plug				870	690380	Seat-Valve (Exhaust)
651	691660	Screw (Starter Gear Cover)						
668	★493823	Spacer						
670	692294	Spacer-Fuel Tank						
676B	397931	Deflector-Muffler (Includes Spark Arrestor)						
676D	497682	Deflector-Muffler (For TUV)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

2271-12

Assemblies include all parts shown in frames.

12/06/2011

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
871	590409	Bushing-Valve Guide (Exhaust) (Used After Code Date 11063000). ----- Note ----- 590409 Bushing-Valve Guide (Intake) (Used After Code Date 11063000). 262001 Bushing-Valve Guide (Exhaust) (Used Before Code Date 11070100). 63709 Bushing-Valve Guide (Intake) (Used Before Code Date 11070100).	930	691919	Guard-Rewind	1019	494256	Kit-Label
			930A	691345	Guard-Rewind	1036		Label-Emissions (Available From A Briggs & Statton Authorized Dealer)
			935	499421	Switch-Interlock (Used Before Code Date 08050100).	1058	380567	Operator's Manual (Used After Code Date 11063000). ----- Note ----- 277039 Operator's Manual (Used Before Code Date 11070100).
			937	691325	Spline-Starter	1059	692311	Kit-Screw/Washer
			937A	799420	Spline-Starter	1095	590507	Gasket Set-Valve (Used After Code Date 11063000). ----- Note ----- 498528 Gasket Set-Valve (Used Before Code Date 11070100).
			957A	692046	Cap-Fuel Tank (Plastic)			
			957B	699985	Cap-Fuel Tank (Plastic)			
			958	698183	Valve-Fuel Shut Off (Plastic)			
			966A	496116	Base-Air Cleaner Primer	1119	691648	Screw (Alternator)
			967A	493537S	Filter-Pre Cleaner	1160	690345	Screw (Interlock Switch)
			968B	692298	Cover-Air Cleaner	1210	498144	Pulley/Spring Assembly (Pulley)
			969	690700	Screw (Blower Housing Cover)	1211	498144	Pulley/Spring Assembly (Spring)
			969A	691138	Screw (Blower Housing Cover)	1319	794467	Label-Warning
			970	691669	Screw (Air Cleaner Primer Bracket)	1330	270962	Manual-Repair
			972	699392	Tank-Fuel (Plastic)			
			972B	699374	Tank-Fuel (Plastic)			
			975	493640	Bowl-Float			
			976	694395	Primer-Carburetor			
			977	498261	Gasket Set-Carburetor			
			994	398067	Arrestor-Spark			
			1005	691346	Fan-Flywheel			
883 ★	691881	Gasket-Exhaust						
910	691094	Stud (Alternator)						
921	497233	Cover-Blower Housing						
921A	695886	Cover-Blower Housing						
922	691831	Spring-Brake						
923	691994	Brake						
925	795403	Cover-Linkage (Used After Code Date 07072200). ----- Note ----- 690595 Cover- Linkage (Used Before Code Date 07072300).						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

